

## Industrial Automation Headquarters

**Delta Electronics, Inc.**  
 Taoyuan Technology Center  
 No.18, Xinglong Rd., Taoyuan City,  
 Taoyuan County 33068, Taiwan  
 TEL: 886-3-362-6301 / FAX: 886-3-371-6301

## Asia

**Delta Electronics (Jiangsu) Ltd.**  
 Wujiang Plant 3  
 1688 Jiangxing East Road,  
 Wujiang Economic Development Zone  
 Wujiang City, Jiang Su Province, P.R.C. 215200  
 TEL: 86-512-6340-3008 / FAX: 86-769-6340-7290

**Delta Greentech (China) Co., Ltd.**  
 238 Min-Xia Road, Pudong District,  
 ShangHai, P.R.C. 201209  
 TEL: 86-21-58635678 / FAX: 86-21-58630003

**Delta Electronics (Japan), Inc.**  
 Tokyo Office  
 2-1-14 Minato-ku Shibadaimon,  
 Tokyo 105-0012, Japan  
 TEL: 81-3-5733-1111 / FAX: 81-3-5733-1211

**Delta Electronics (Korea), Inc.**  
 1511, Byucksan Digital Valley 6-cha, Gasan-dong,  
 Geumcheon-gu, Seoul, Korea, 153-704  
 TEL: 82-2-515-5303 / FAX: 82-2-515-5302

**Delta Electronics Int'l (S) Pte Ltd.**  
 4 Kaki Bukit Ave 1, #05-05, Singapore 417939  
 TEL: 65-6747-5155 / FAX: 65-6744-9228

**Delta Electronics (India) Pvt. Ltd.**  
 Plot No 43 Sector 35, HSIIDC  
 Gurgaon, PIN 122001, Haryana, India  
 TEL : 91-124-4874900 / FAX : 91-124-4874945

## Americas

**Delta Products Corporation (USA)**  
 Raleigh Office  
 P.O. Box 12173, 5101 Davis Drive,  
 Research Triangle Park, NC 27709, U.S.A.  
 TEL: 1-919-767-3800 / FAX: 1-919-767-8080

**Delta Greentech (Brasil) S.A.**  
 Sao Paulo Office  
 Rua Itapeva, 26 - 3° andar Edifício Itapeva One-Bela Vista  
 01332-000-São Paulo-SP-Brazil  
 TEL: 55 11 3568-3855 / FAX: 55 11 3568-3865

## Europe

**Deltronics (The Netherlands) B.V.**  
 Eindhoven Office  
 De Witbogt 20, 5652 AG Eindhoven, The Netherlands  
 TEL : +31-40-2592850 / FAX : +31-40-2592851



# DX-2300 Series Industrial Ethernet Cloud Router User Manual

2016-02-03

\*We reserve the right to change the information in this manual without prior notice.

[www.deltaww.com](http://www.deltaww.com)

# **DX-2300 Series Industrial Ethernet Cloud Router User Manual**

## **Table of Contents**

Chapter 1	Production Introduction	
1.1	Product Overview .....	1-3
1.1.1	Network Design .....	1-3
1.1.2	Features.....	1-4
1.1.3	Front Panel Ports and LEDs.....	1-5
1.1.4	Bottom Panel .....	1-5
1.1.5	Dimension .....	1-6
1.2	Package Checklist .....	1-7
Chapter 2	User Interface	
2.1	Web-based GUI Configuration .....	2-2
2.1.1	System Connection.....	2-2
2.1.2	Default IP Address/Account/Password .....	2-2
2.1.3	Local Network Setups .....	2-2
2.1.4	Logging in .....	2-4
Chapter 3	Functions	
3.1	Configuration Page.....	3-2
3.1.1	Status.....	3-2
3.1.1.1	Device Information .....	3-2
3.1.1.2	Network Status.....	3-3
3.1.1.3	Routing Table .....	3-4
3.1.1.4	Local Log .....	3-4
3.1.1.5	Traffic Statistics .....	3-5
3.1.1.6	Cloud Status .....	3-5
3.1.1.7	Connected Device .....	3-5
3.1.2	Network.....	3-6
3.1.2.1	WAN Configurations .....	3-6
3.1.2.2	LAN Configurations.....	3-8
3.1.2.3	Static Routing Rules .....	3-9
3.1.2.4	Dynamic DNS .....	3-10

3.1.3	Firewall .....	3-12
3.1.3.1	Firewall Settings .....	3-12
3.1.3.2	DMZ Settings .....	3-13
3.1.3.3	Port Forward .....	3-13
3.1.3.4	Port Trigger .....	3-15
3.1.3.5	URL Filter .....	3-17
3.1.3.6	MAC Filter .....	3-18
3.1.3.7	IP Filter .....	3-18
3.1.4	System.....	3-19
3.1.4.1	User Management.....	3-19
3.1.4.2	Time Configurations .....	3-20
3.1.4.3	RS232.....	3-21
3.1.4.4	RS485.....	3-23
3.1.4.5	Modbus TCP .....	3-27
3.1.4.6	Log Settings.....	3-29
3.1.4.7	Firmware Upgrade .....	3-29
3.1.4.8	Backup & Restore .....	3-30
3.1.4.9	Scheduled Jobs .....	3-31
3.1.4.10	Network Diagnosis .....	3-33
3.1.4.11	System Reboot .....	3-34
3.1.4.12	Event Management .....	3-34
3.1.4.13	Variable Management .....	3-36
3.1.5	Cloud Service .....	3-38
3.2	SD Card Quick Installation .....	3-41

## Chapter 4 DIACom

4.1	Introduction to DIACom.....	4-2
4.1.1	Select a Suitable Firmware Version.....	4-2
4.1.2	DIACom Installation .....	4-3
4.1.3	DIACloud Account Registration.....	4-3
4.1.4	Bind DIACloud Account .....	4-5
4.1.5	Setup a Secure Tunnel.....	4-6
4.1.6	Remote Control and Monitoring via DIACom .....	4-8

## Chapter 5 DIACloud

5.1	Introduction to DIACloud.....	5-2
5.1.1	Select a Suitable Firmware Version.....	5-2

5.2	Instructions for DIACloud .....	5-2
5.2.1	Register and Login.....	5-2
5.2.2	Home .....	5-4
5.2.3	Devices.....	5-6
5.2.4	Alarm .....	5-14
5.2.5	Secure Tunnels .....	5-15
5.2.6	Sub Users .....	5-16
5.2.7	Logs .....	5-19
5.2.8	Orders .....	5-20
5.2.9	Profile.....	5-21

## Chapter 6 DIACloud APP

6.1	Introduction to DIACloud APP.....	6-2
6.1.1	Devices Supported.....	6-2
6.1.2	DIACloud APP Installation.....	6-2
6.2	DIACloud APP Function .....	6-3
6.2.1	DIACloud APP Login.....	6-3
6.2.2	Device List .....	6-4
6.2.3	Device Details .....	6-5
6.2.4	Registers View .....	6-6
6.2.5	Alarm List .....	6-7

---

# Chapter 1 Production Introduction

## Table of Contents

- 1.1 Product Overview.....1-3**
  - 1.1.1 Network Design..... 1-3
  - 1.1.2 Features ..... 1-4
  - 1.1.3 Front Panel Ports and LEDs ..... 1-5
  - 1.1.4 Bottom Panel ..... 1-5
  - 1.1.5 Dimension ..... 1-6
- 1.2 Package Checklist .....1-7**

## About This Manual

The user manual is suitable for **DX-2300LN-WW**. If you need to use the Delta DX-2300 series products in China areas, please refer to the model name **DX-2300LN-CN** on the Delta website, or contact our branch offices or distributors.

## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates radio frequency signal and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CE Declaration of Conformity

In accordance with the Directives 2004/108/EC\*, 2014/30/EU, 2006/95/EC\* and 2014/35/EU. The test record, data evaluation and DX-2300 Series configurations represented herein are true and accurate under the standards herein specified.

## Disclaimers and Limitation of Liabilities

To the maximum extent permitted by law and regardless DELTA be aware or has been advised of the possibility of these damages, DELTA is not liable to any user or anyone else for: (a) any loss of use, data, reputation, goodwill, credit, opportunity, economy or profits, whether or not foreseeable; (b) any special, incidental, indirect, consequential, or punitive damages whatsoever; (c) any losses or damages based on any theory of liability, including breach of contract or warranty, negligence or other tortious action; (d) any losses or damages resulting from use or unable to use the systems or devices to which the Software or Services are incorporated or co-operated; and (e) any losses or damages arising from any other claim or in connection with the use of or access to the Software or Services.


## 1.1 Product Overview

The DX-2300LN-WW is a wired industrial router, an Internet of Things wired communication product of industrial grade.

The product is equipped with multiple application interfaces, including Ethernet interface, RS232 serial interface and RS485 serial interface, and thus can satisfy the user's various different application demands.

The product supports DIACloud platform services, and by this platform, convenient and efficient point-to-point connection with the router, safe and reliable data transmission, remote device management and configuration, remote firmware upgrading, remote maintenance and other functions can be realized, so as to save the cost of device operation and maintenance for users.


The product can be widely used in the fields requiring mobile network interconnection, such as industrial automation, smart home, intelligent building, smart power grids, video surveillance, intelligent self-service and intelligent transportation.

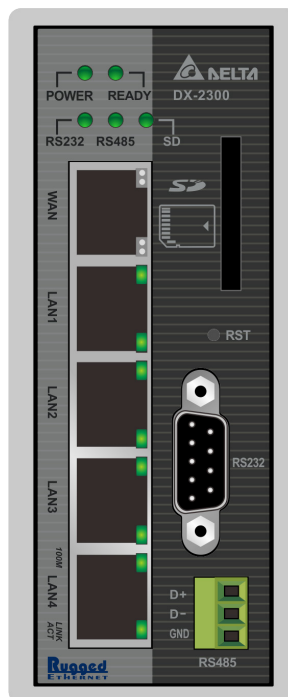

### 1.1.1 Network Design

Connect the intelligent devices at different sites to the Internet via the DX-2300LN-WW. The DX-2300LN-WW allows the point-to-point connection through DIACloud platform. In addition to safe and reliable data transmission, it can save the cost of purchasing and maintaining VPN device.

The maintenance personnel can realize remote maintenance and management of the device through DIACloud platform whenever and wherever possible, which can ensure safe and reliable data transmission, and also can save operation and management cost of the device for users.

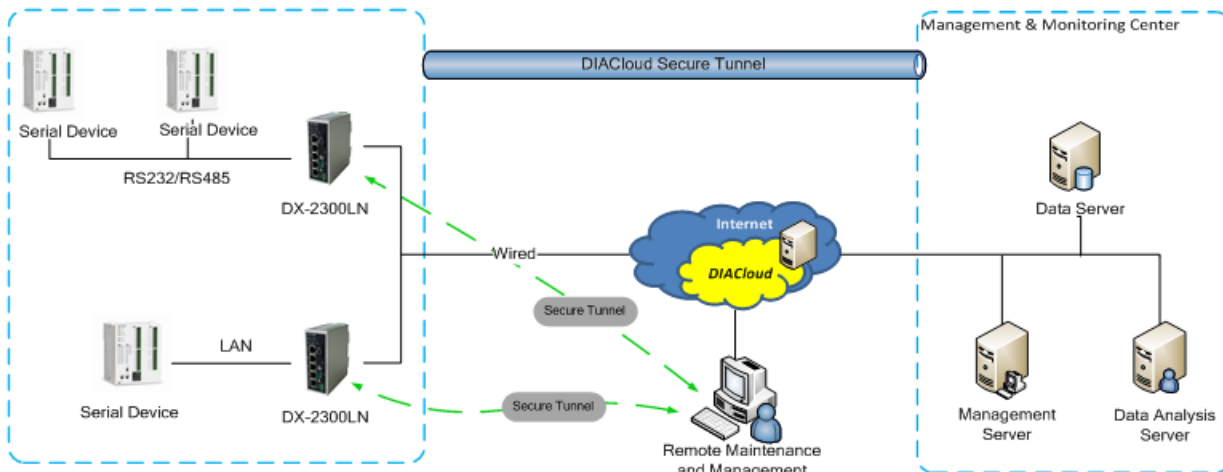


### 1.1.2 Features


- Device support various connection method in WAN port, such as the static IP, DHCP client.
- Provide dual serial port (RS232 & RS485) and LAN port connectivity.
- Build in Watch-Dog.
- NTP server, built in RTC.
- Local and remote firmware upgrade.
- Support Firewall: Stateful Packet Inspection (SPI), Prevent Denial of Service (DoS) Attacks, NAT (Network Address Translation), Port Triggering, Port Mapping, IP Address Filtering, MAC Address Filtering, URL Filtering, DHCP Server, Dynamic DNS, Static Routes, Demilitarized Zone (DMZ)
- TCP/IP, UDP, ICMP, DHCP, HTTP, DNS, SSH protocol
- Modbus TCP and Modbus RTU protocol
- SMS alarm functions, users can customize the alarm condition
- Provide task schedule management
- Local log and remote log server
- Configuration backup and importing
- Network data flow statistic
- Networking failure diagnostic
- DIACloud platform services that can realize safe point-to-point data transmission, remote device configuration and management, firmware upgrading, and support batch configuration and upgrading of multiple devices



### 1.1.3 Front Panel Ports and LEDs

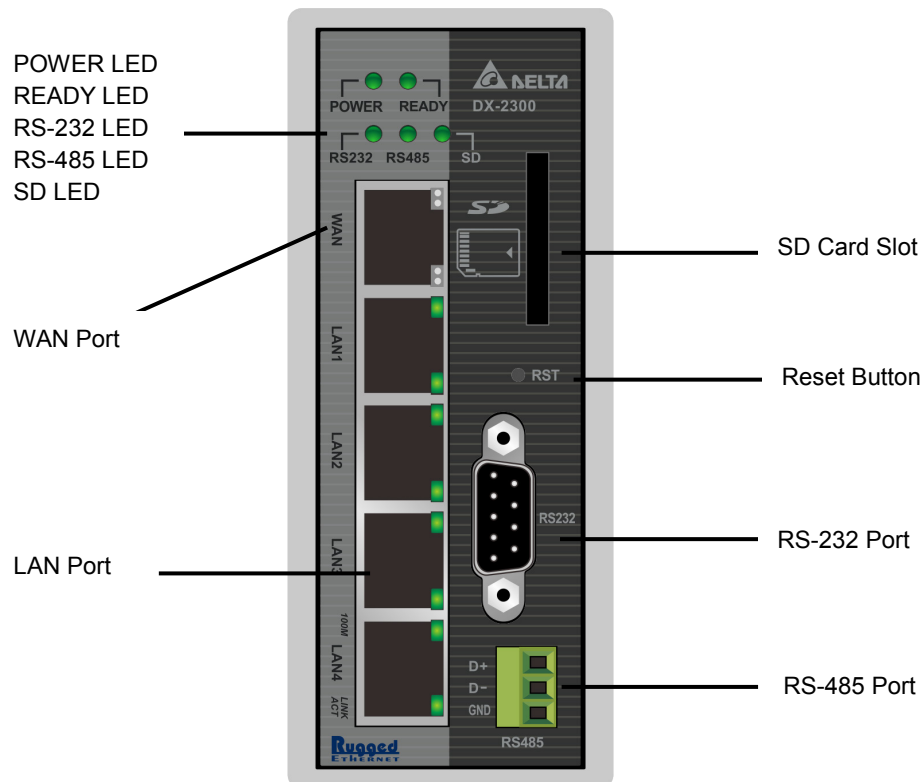

### 1.1.4 Bottom Panel

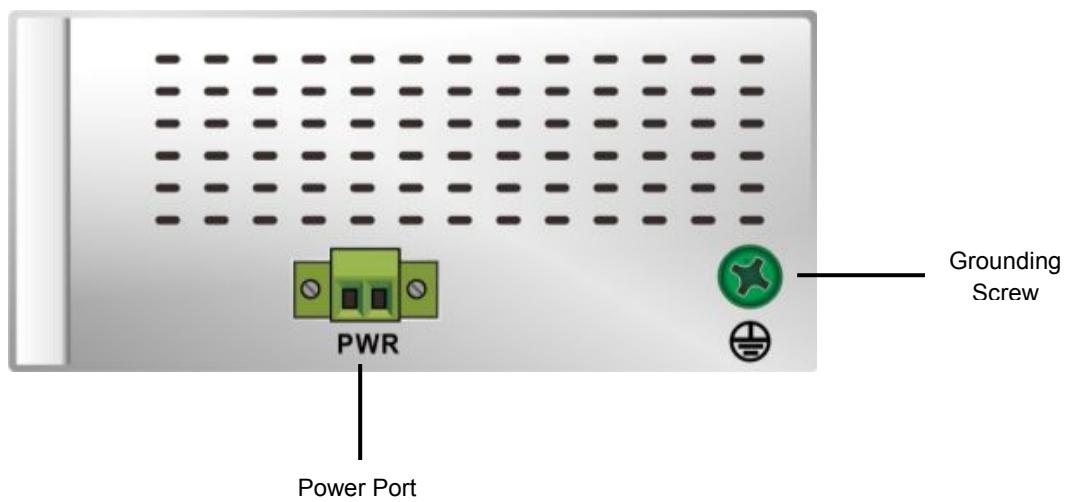

#### Notice

This router's reset button is on the front panel. By pressing the Reset button, users can reset the router or reset the router to factory default settings. See the instruction below:


- Reset the Router: With the router powered on, press the Reset button and release the button right away.

1

- Reset to Factory Defaults: With the router powered on, press and hold the Reset button for 3~6 seconds and then release the button.
  - Reset can only be done when the device is running properly.
  - With the router powered on, press and hold the Reset button until all the LEDs go out (except the Power LED). Then release the button and wait the router to reboot to its factory default settings.

### 1.1.5 Dimension

Unit = mm

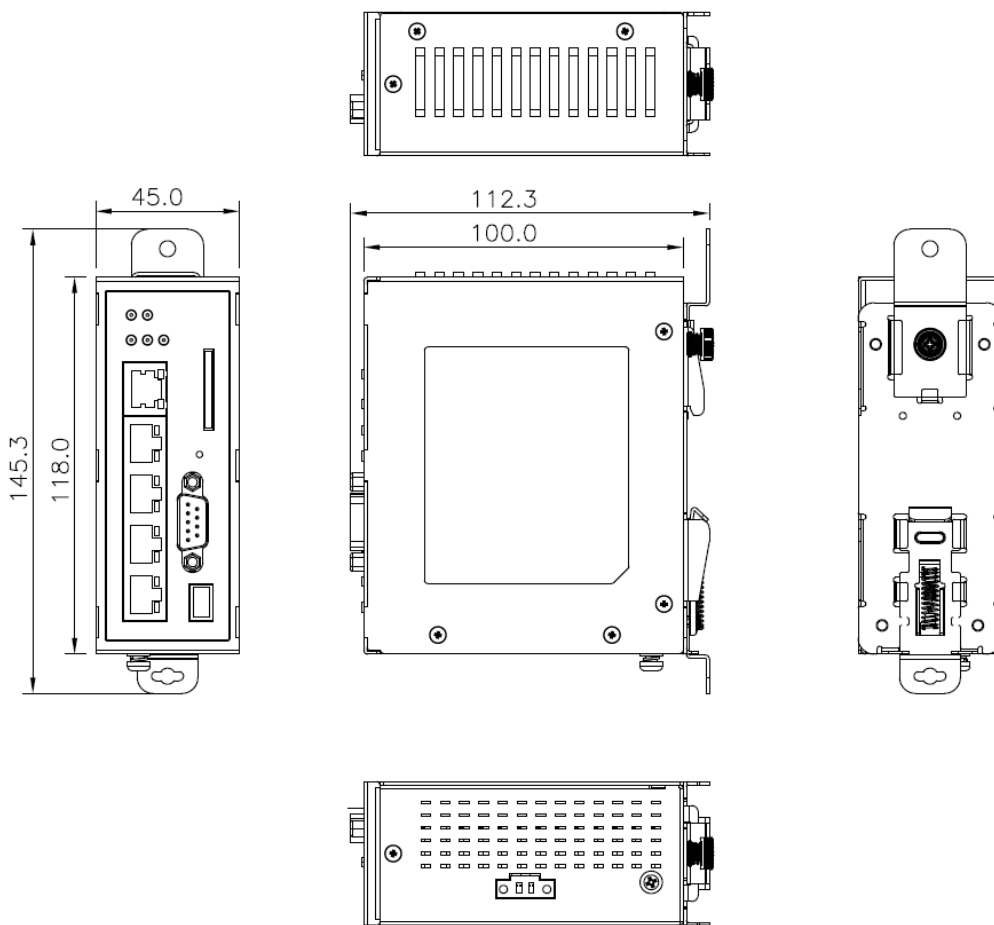

## 1.2 Package Checklist

Unpack the package carefully and check the package contents. The package should contain the following items:

- DX-2300LN-WW Industrial Ethernet Cloud Router x1
- Quick Installation Sheet x1
- Accessory for Wall-mounting installation x1



### Notice

Verify that nothing is missing from the DX-2300LN-WW package by using the check list above. If any item is found missing or damaged, please contact your local sales representative for support.

---

# Chapter 2 User Interface

## Table of Contents

- 2.1 Web-based GUI Configuration .....2-2**
- 2.1.1 System Connection ..... 2-2
- 2.1.2 Default IP Address/Account/Password ..... 2-2
- 2.1.3 Local Network Setups ..... 2-2
- 2.1.4 Logging in..... 2-4


## 2.1 Web-based GUI Configuration

The DX-2300LN-WW Industrial Ethernet Cloud Router provides a friendly Web Browser Configuration for users to set up and operate more intuitively.


### 2.1.1 System Connection

First, connect the PC used for configuration with Ethernet interface of the router directly or through the switch/hub.

#### Method I

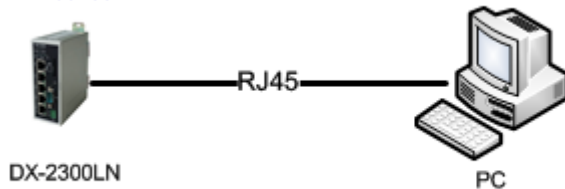

#### Method II

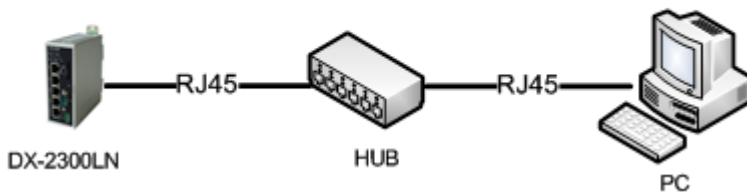





### 2.1.2 Default IP Address/Account/Password

The default domain name of router is www.diadevice.com, default IP address is 192.168.1.1. The initial account and password is admin/admin

### 2.1.3 Local Network Setups

After the connection of the local computer and the router is done, you will need to set the network configuration for your computer. There are 2 methods for the setting, we prefer you use the first one:

- **Obtain an IP address automatically by using the router as a DHCP server.**
  1. Open Network Connections by clicking the Start button , and then clicking Control Panel.
  2. Under Network and Sharing Center, click View network connections.
  3. Right-click the connection that you want to change, and then click Properties.  If you're prompted for an administrator password or confirmation, type the password or provide confirmation.
  4. Click the Networking tab. Under This connection uses the following items, click either Internet Protocol Version 4 (TCP/IPv4) or Internet Protocol Version 6 (TCP/IPv6), and then click Properties.
  5. Click Obtain DNS server address automatically and then click OK to get a DNS server address automatically using DHCP.

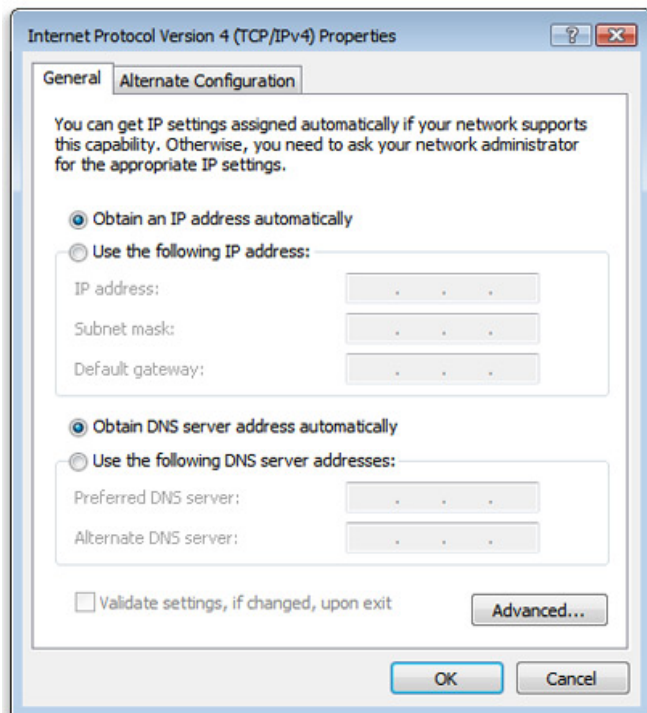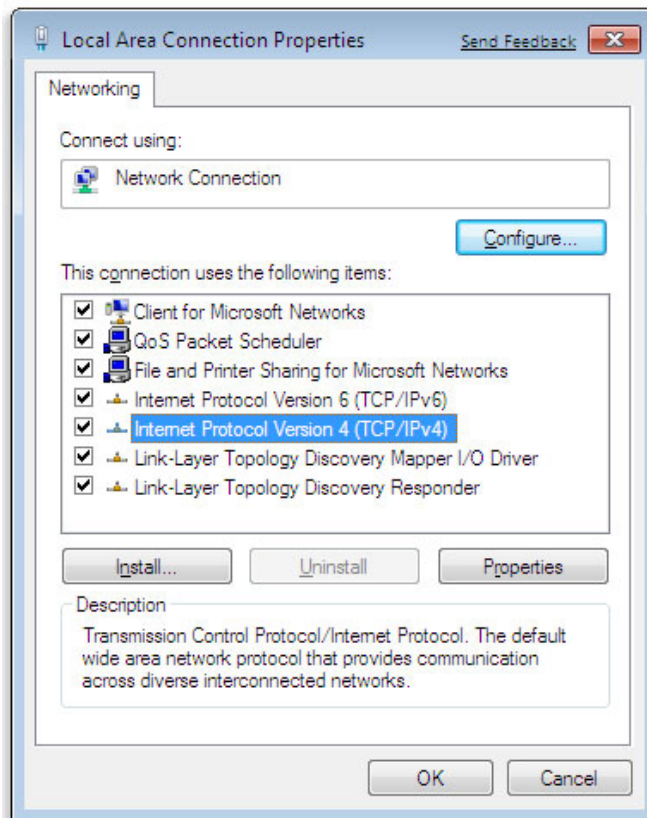


- **Set up the IP address manually.**

(The IP address of the computer should be in the same network segment as the router's.)

Since the router's default IP address is 192.168.1.1 and the subnet mask is 255.255.255.0, the computer's IP address can be set between 192.168.1.2 to 192.168.1.254. However, you'll need to make sure there are no IP conflicts.

Here, we set the address to 192.168.1.10 and the default gateway to 192.168.1.1. For DNS, the usable DNS address can be selected or the address can also be set to 192.168.1.1.

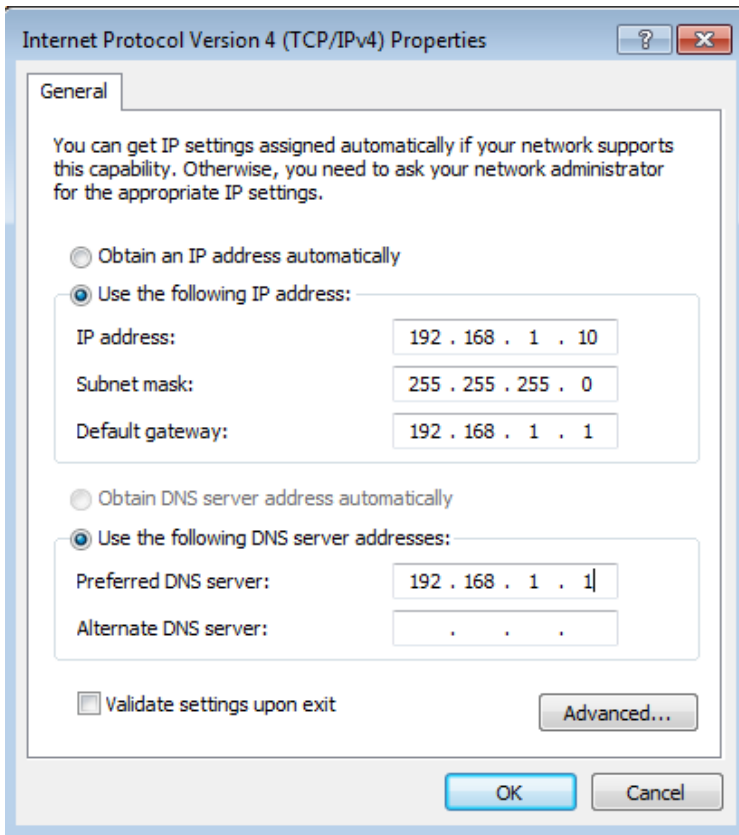


2

### 2.1.4 Logging in

1. Open your Internet Explorer browser and input the router's domain name (www.diadvice.com) or LAN IP address (Default is 192.168.1.1) in the search bar and then press Enter.



2. You'll be prompted with the log-in page. Input the user name and the password (Default is admin/admin) and then press Enter to log in to the setup page.

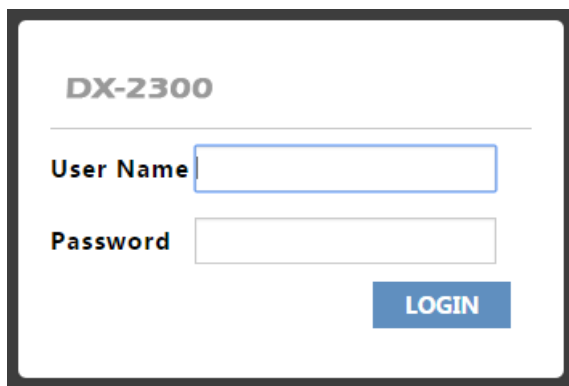

3. After login, you can see the main selection area on the left hand side and the upper area of the page. The detailed settings can be seen on the right hand side of the page.

**DX-2300**    **STATUS**    NETWORK    FIREWALL    SYSTEM    CLOUD SERVICE

**Device Information**    Device info help.

STATUS > Device Information

**Hardware Version**

RTM Version:	DX2300v2
Release Date:	2015-06-26 04:05:53 PM
S/N:	DXL02040F210006

**Software Version**

RTM Version:	DX2300 1.0.0.1
Release Date:	2015-06-26 04:05:53 PM
Current Version:	DX2300-1.0.0.5-2015-11-04
Upgrade Date:	2015-11-06 14:44:35

**Resource Usage Information**

CPU Usage:	15%
Total Memory:	123864KB
Memory Used:	62992KB
Memory Usage:	50%

### Notice



Considerations of the router LAN port IP will be change after device is activated, after this if you need login the web still, we prefer you use [www.diadevice.com](http://www.diadevice.com) and use the automatically obtained IP address and DNS server for the computer



---

## Chapter 3 Functions

### Table of Contents

<b>3.1</b>	<b>Configuration Page</b>	<b>3-3</b>
3.1.1	Status	3-3
3.1.1.1	Device Information	3-3
3.1.1.2	Network Status	3-4
3.1.1.3	Routing Table	3-5
3.1.1.4	Local Log	3-5
3.1.1.5	Traffic Statistics	3-6
3.1.1.6	Cloud Status	3-6
3.1.1.7	Connected Device	3-6
3.1.2	Network	3-7
3.1.2.1	WAN Configurations	3-7
3.1.2.2	LAN Configurations	3-9
3.1.2.3	Static Routing Rules	3-10
3.1.2.4	Dynamic DNS	3-11
3.1.3	Firewall	3-13
3.1.3.1	Firewall Settings	3-13
3.1.3.2	DMZ Settings	3-14
3.1.3.3	Port Forward	3-14
3.1.3.4	Port Trigger	3-16
3.1.3.5	URL Filter	3-18
3.1.3.6	MAC Filter	3-19
3.1.3.7	IP Filter	3-19
3.1.4	System	3-20
3.1.4.1	User Management	3-20
3.1.4.2	Time Configurations	3-21
3.1.4.3	RS232	3-22
3.1.4.4	RS485	3-24
3.1.4.5	Modbus TCP	3-28
3.1.4.6	Log Settings	3-30
3.1.4.7	Firmware Upgrade	3-30
3.1.4.8	Backup & Restore	3-31
3.1.4.9	Scheduled Jobs	3-32
3.1.4.10	Network Diagnosis	3-34

3.1.4.11	System Reboot.....	3-35
3.1.4.12	Event Management .....	3-35
3.1.4.13	Variable Management.....	3-37
3.1.5	Cloud Service.....	3-39
<b>3.2</b>	<b>SD Card Quick Installation .....</b>	<b>3-42</b>

## 3.1 Configuration Page

After logging in to the DX-2300LN-WW, you will see 5 setting categories on the top of the configuration page, Status, Network, Firewall, System and Cloud Service. Each category will be covered in the following sections respectively.

### 3.1.1 Status

You can view summary or detailed information on the Device Information, Network Status, Routing Table, Local Log, Traffic Statistics, Cloud Status, and Connected Device.

#### 3.1.1.1 Device Information

This page shows basic information on the Hardware/Software version and Resource Usage Information.

[STATUS](#) > Device Information

#### Hardware Version

RTM Version: BlueGinger-DX2300 v1  
 Release Date: 2015-02-15 05:05:37 AM  
 S/N: DXL02040D340005

#### Software Version

RTM Version: BlueGinger-DX2300 0.5.0  
 Release Date: 2015-02-15 05:05:37 AM  
 Current Version: DX2300WW-1.3.1.1-2016-04-29  
 Upgrade Date: 2016-04-29 17:24:07

#### Resource Usage Information

CPU Usage: 15%  
 Total Memory: 123832KB  
 Memory Used: 62124KB  
 Memory Usage: 50%

- Hardware Version

Item	Description
RTM Version	Release to manufacturing version of the router
Release Date	Hardware release date
S/N	Serial number of the router

● Software Version

Item	Description
<b>RTM Version</b>	Release to manufacturing version of the software
<b>Release Date</b>	Software release date
<b>Current Version</b>	Version number of the software currently used on the router
<b>Upgrade Date</b>	Upgrade time of the software currently used on the router

● Resource Usage Information

Item	Description
<b>CPU Usage</b>	The CPU usage of current router
<b>Total Memory</b>	The total memory on the router
<b>Memory Used</b>	The memory currently used on the router.
<b>Memory Usage</b>	The current ratio of the router usage

**3.1.1.2 Network Status**

This page shows basic information on Internet Information and LAN Status.

Internet Information includes the MAC Address, IP Address, Gateway Address, Primary DNS, Network Mask, WAN Connection Mode, and Secondary DNS.

LAN Status includes the Device Name, IP Address, DHCP Server, MAC Address and Network Mask. When the DHCP server is enabled, you can see more information, including the address lease time, start address and end address.

[🏠 STATUS > Network Status](#)

**☰ Internet Information**

MAC Address	00:23:11:22:33:4C		
IP Address	0.0.0.0	Network Mask	0.0.0.0
Gateway Address	0.0.0.0	WAN Connection Mode	DHCP
Primary DNS	0.0.0.0	Secondary DNS	0.0.0.0

**☰ LAN Status**

Device Name	DX2300_334D	MAC Address	00:23:11:22:33:4D
IP Address	192.168.1.1	Network Mask	255.255.255.0
DHCP Server	Enabled		
Lease Time	One day		
First IP Address	192.168.1.100	Last IP Address	192.168.1.200

### 3.1.1.3 Routing Table

This page shows basic information on the routing table, including the Destination, Gateway, Network Mask, HOPS and Network Interface.

[STATUS](#) > Routing Table

Destination	Gateway	Network Mask	HOPS	Network Interface
192.168.1.0	0.0.0.0	255.255.255.0	0	br0

### 3.1.1.4 Local Log

This page shows logs of the router, including the System log, Warning log and the Debug log. You can use the buttons on the right hand side to refresh, clear or download the displayed logs.

[STATUS](#) > Local Log

#### Log Type

Informative log
  Warning log
  Debug log

#### Log Content

Refresh

Clear

Download

Timestamp	Content
May 12 13:42:47	syslog.info syslogd started: BusyBox v1.15.0
May 12 13:42:51	user.info kernel: ip_tables: (C) 2000-2006 Netfilter Core Team
May 12 13:42:53	user.info kernel: ipt_CLUSTERIP: ClusterIP Version 0.8 loaded successfully
May 12 13:42:54	user.info kernel: arp_tables: (C) 2002 David S. Miller
May 12 13:42:57	user.info kernel: usbcore: registered new interface driver usbserial
May 12 13:42:57	user.info kernel: USB Serial support registered for generic
May 12 13:42:57	user.info kernel: usbcore: registered new interface driver usbserial_generic
May 12 13:42:57	user.info kernel: usbserial: USB Serial Driver core
May 12 13:42:58	user.info kernel: USB Serial support registered for GSM modem (1-port)
May 12 13:42:58	user.info kernel: usbcore: registered new interface driver option
May 12 13:42:58	user.info kernel: option: v0.7.2:USB Driver for GSM modems
May 12 13:42:58	user.info kernel: USB Serial support registered for Vizzini USB serial port

PREV

1

2

3

...

5

6

7

NEXT

### 3.1.1.5 Traffic Statistics

This page shows network traffic information of the router, including the data sent and received over WAN and LAN. You can use the buttons on the right hand side to refresh or clear the traffic information.

[STATUS](#) > Traffic Statistics

Refresh

Clear

#### Traffic Of WAN

Data Sent: 590 bytes      Data Received: 0 bytes

#### Traffic Of LAN

Data Sent: 621874 bytes      Data Received: 471204 bytes

### 3.1.1.6 Cloud Status

This page shows cloud server information of the router, including the Registration Status, Service Status, and Activated Time.

[STATUS](#) > Cloud Status

#### Cloud Status

Registration Status: Not registered

Service Status: Disabled

Activated Time: N/A

### 3.1.1.7 Connected Device

This page shows information of the devices connected to the router, including the IP Address, Host Name, MAC Address, and Address Allocated By.

[STATUS](#) > Connected Device

Refresh

ID	IP Address	Host Name	MAC Address	Address Allocated By
1	192.168.1.100	CNXMDNIPC062	3C:97:0E:DE:7B:25	DHCP

## 3.1.2 Network

You can set up networks, including the WAN Configurations, LAN Configurations, Static Routing Rules and Dynamic DNS.

### 3.1.2.1 WAN Configurations

This page is used for setting up the WAN (Wide Area Network), including the WAN Connection Mode, IP Allocation Method, IP Address, Network Mask, Gateway Address, Packet MTU and DNS.

[🏠 NETWORK](#) > WAN Configurations

#### ☰ WAN Configurations

WAN Connection Mode	<input type="text" value="DHCP"/>
IP Allocation Method	<input type="text" value="Dynamic"/>
IP Address	<input type="text" value="0.0.0.0"/>
Network Mask	<input type="text" value="0.0.0.0"/>
Gateway Address	<input type="text" value="0.0.0.0"/>
Packet MTU	<input type="text" value="1500"/>
<i>(Don't change the settings unless really need to)</i>	
Retrieve DNS Address By:	<input type="text" value="Dynamic"/>
Primary DNS	<input type="text" value="0.0.0.0"/>
Secondary DNS	<input type="text" value="0.0.0.0"/>



Description	Default
<b>WAN Connection Mode</b>	
Your device can connect to the internet via the WAN port with a Dynamic IP or Static IP. <ul style="list-style-type: none"> <li>● Static IP: Manually set up the IP address.</li> <li>● Dynamic IP: DHCP (Dynamic Host Configuration Protocol) allows you to obtain an IP address automatically from your router.</li> </ul>	DHCP
<b>IP Allocation Method</b>	
The IP Allocation Method is the same as the WAN Connection Mode that you have set. You can apply to different option by modifying the WAN Connection Mode.	DHCP

Description	Default
<ul style="list-style-type: none"> <li>● Dynamic: Dynamic Host Configuration Protocol (DHCP) allows you to obtain an IP address automatically from your router.</li> <li>● Manual: Manually set up the IP address (Static).</li> </ul>	
<b>IP Address</b>	
Set up an IP address for your device to connect to the internet via the WAN port. It's configurable when the mode is set to Static.	0.0.0.0
<b>Network Mask</b>	
Set up the WAN network mask. It's configurable when the mode is set to Static.	0.0.0.0
<b>Gateway Address</b>	
Set up the gateway address. It's configurable when the mode is set to Static.	0.0.0.0
<b>MTU</b>	
Maximum Transmission Unit is the largest packet that can be transmitted over packet based networks.	1500
<b>Retrieve DNS Address By</b>	
<p>The Retrieve DNS Address Method is the same as the WAN Connection Mode that you have set. You can apply to different option by modifying the WAN Connection Mode.</p> <p>DNS address can be retrieved by DHCP setup or manually set.</p> <ul style="list-style-type: none"> <li>● Dynamic: Dynamic Host Configuration Protocol (DHCP) allows you to obtain an IP address automatically from your router.</li> <li>● Manual: Manually set up the IP address (Static).</li> </ul>	DHCP
<b>Primary DNS</b>	
Set up the primary DNS. It's configurable when the mode is set to Static.	0.0.0.0
<b>Secondary DNS</b>	
Set up the secondary DNS. It's configurable when the mode is set to Static.	0.0.0.0



### 3.1.2.2 LAN Configurations

This page is used for setting up the LAN, including the Device Name, IP Address, Network Mask, and DHCP Server.

🏠 NETWORK > LAN Configurations

#### ☰ LAN Configurations

Device Name	<input type="text" value="DX2300_334D"/>
IP Address	<input type="text" value="192.168.1.1"/>
Network Mask	<input type="text" value="255.255.255.0"/>
DHCP Server	<input type="text" value="Enable"/>
Address Lease Time	<input type="text" value="One day"/>
First IP Address	192.168.1. <input type="text" value="100"/>
Last IP Address	192.168.1. <input type="text" value="200"/>
STP	<input type="text" value="Disable"/>



Description	Default
<b>Device Name</b>	
Set up a device name for your router. The name shall be composed of letters, numbers and underline, starting with a letter or number. The maximum string length is 32 bytes.	DX2300 + “_” + “the last four digits of Mac address”
<b>IP Address</b>	
Set up an IP address for your device.	192.168.1.1
<b>Network Mask</b>	
Set up the LAN network mask.	255.255.255.0
<b>DHCP Server</b>	
Dynamic Host Configuration Protocol allows you to obtain an IP address automatically from your router. You can enable or disable this functionality.	Enable
<b>Address Lease Time</b>	
To set up the address lease time so that a client doesn't hold an IP address indefinitely. It allows for a mechanism to gracefully reuse DHCP addresses. Options here are 1 to 3 days.	One day

Description	Default
<b>First IP Address</b>	
To increase the number of addresses available to clients, you can change the Start Address.	192.168.1.100
<b>Last IP Address</b>	
To increase the number of addresses available to clients, you can change the End Address.	192.168.1.200
<b>STP</b>	
STP is a network protocol that builds a logical loop-free topology for Ethernet networks. The basic function of STP is to prevent bridge loops and the broadcast radiation that results from them. If this STP is enabled, the traffic usage will increase about 15Mbit in 24 hours.	Disable

### 3.1.2.3 Static Routing Rules

This page is used for setting up the Static Routing, including the Rule Name, Network Interface, Enabled, Destination IP, Network Mask, Gateway Address and Metric. Click the "Add A Rule" to add static routing rules.

[🏠 NETWORK](#) > [Static Routing Rules](#)

Add A Rule

ID	Enabled	Name	Destination	Gateway	Network Interface
----	---------	------	-------------	---------	-------------------

After clicking the "Add A Rule" , you will see the following page.

[🏠 NETWORK](#) > [Static Routing Rules](#)

#### ☰ Add A Rule

Rule Name	<input type="text"/>
Network Interface	<input type="text" value="WAN"/>
Enabled	<input type="text" value="Yes"/>
Destination IP	<input type="text"/>
Network Mask	<input type="text"/>
Gateway Address	<input type="text"/>
Metric	<input type="text" value="2"/> (2~15)

Save

Back

Description	Default
<b>Rule Name</b>	
Set up a name for your rule. The name shall be composed of letters, numbers and underline, starting with a letter or number. The maximum string length is 32 bytes.	N/A
<b>Network Interface</b>	
For a specific network destination address, select the network interface of the router for sending data package. Options are LAN and WAN.	WAN
<b>Enabled</b>	
Activate the static routing functionality.	Yes
<b>Destination IP</b>	
Set up a Destination IP address for your device.	N/A
<b>Network Mask</b>	
Set up the subnet mask corresponding to the destination network segment. If the final destination of the routing is a single host, please type in 255.255.255.255.	N/A
<b>Gateway Address</b>	
Set up the next-hop routing address.	N/A
<b>Metric</b>	
Set up the hops. The number of hops that are passed for reaching the destination address. One hop indicates passing one router passed. The range is 2~15.	2

### 3.1.2.4 Dynamic DNS

This page is used for setting up the Dynamic DNS Settings, including the Dynamic DNS, Service Provider, Domain User Name, Password, and the Refreshing Interval.

🏠 NETWORK > Dynamic DNS

### ☰ Dynamic DNS Settings

Dynamic DNS

Service Provider

Domain

User Name

Password

Refreshing Interval  (120~86400s)

Save

Cancel

Description	Default
<b>Dynamic DNS</b>	
Dynamic Host Configuration Protocol allows you to obtain an IP address automatically from your router. You can enable or disable this functionality.	Disable
<b>Service Provider</b>	
Select the dynamic domain service provider.	www.DynDns.org
<b>Domain</b>	
The domain applied for to the corresponding dynamic domain service provider.	N/A
<b>User Name</b>	
The name of the user registered at the corresponding dynamic domain service provider.	N/A
<b>Password</b>	
The corresponding password to the registered user.	N/A
<b>Refreshing Interval</b>	
Set up the time for the router to update its public network IP from the dynamic domain service provider. The value range is 120~86400 sec.	86400

### 3.1.3 Firewall

You can set up firewall configurations, including the Firewall Settings, DMZ Settings, Port Forward, Port Trigger, URL Filter, MAC Filter, and IP Filter.

#### 3.1.3.1 Firewall Settings

This page is used for setting up the basic firewall settings, including the SPI firewall switch, WAN Ping response, LAN SSH function and WAN SSH.

[🏠 FIREWALL > Firewall Settings](#)

##### ☰ Basic Firewall Settings

Firewall	Enable ▾
WAN Ping	Not responded ▾
LAN SSH	Enable ▾
WAN SSH	Disable ▾

Save

Cancel

Description	Default
<b>Firewall</b>	
The SPI Firewall keeps track of the state of network connections travelling across it, protecting your Internet connection against Internet threats and Denial of Service (DoS).	Enable
<b>WAN Ping</b>	
It creates a filter that your router not to respond to Ping command and prevents other users on the internet from pinging your pc and gaining your IP address.	Not responded
<b>LAN SSH</b>	
Set up whether to allow LAN end to connect with the router via SSH.	Enable
<b>WAN SSH</b>	
Set up whether to allow WAN end to connect with the router via SSH.	Disable

### 3.1.3.2 DMZ Settings

This page is used for setting up the DMZ server.

[HOME](#) [FIREWALL](#) > [DMZ Settings](#)

#### DMZ Settings

DMZ Server

DMZ Host IP Address

Save

Cancel

Description	Default
<b>DMZ Server</b>	
Demilitarized zone (DMZ) is a special segment of the local network reserved for servers accessible from the Internet, adding an additional layer of security.	Disable
<b>DMZ Host IP Address</b>	
Set up the IP address for the DMZ host.	N/A

### 3.1.3.3 Port Forward

This page is used for setting up the port forward, including configuring the Network Services, Service Name, Protocol, Public Port, Server Port, and Server IP Address.

1. Click the "Add A Portforward Rule" to add port forwarding entries to the router.

[HOME](#) [FIREWALL](#) > [Port Forward](#)

Add A Portforward Rule

ID	Service Name	Protocol	Public Port	Server Port	Server IP Address
----	--------------	----------	-------------	-------------	-------------------

2. After clicking the "Add A Portforward Rule" , you will see the following page.

🏠 FIREWALL > Port Forward

☰ **Add A Portforward Rule**

Network Services

Service Name

Protocol

Public Port   (1~65534)

Server Port   (1~65534)

Server IP Address 192.168.1.

Description	Default
<b>Network Services</b>	
Select the common network services. Refer to the following common service list for optional values.	Customized
<b>Service Name</b>	
Set up the service name for port forwarding. The name is composed of letters, numbers and underline, starting with a letter or number. The maximum string length is 32 bytes.	N/A
<b>Protocol</b>	
Set up the protocol type for port forwarding.	TCP/UDP
<b>Public Port</b>	
Set up the public port for port forwarding. The port range is 1~65534. A Public port should be less than or equal to the server port.	Single Port
<b>Server Port</b>	
<p>Set up the server port for port forwarding. The port range is 1~65534. A server port should be greater than or equal to the public port.</p> <p>When the public port is set to a Single Port, the server port can only be set to a Single Port. When the public port is set to a Port Range, the server port can be set to a Single Port or a Port Range. And when the public port is set to a single port, all the port will be forwarded to ONE single port.</p> <p>Examples of different port forwarding settings:</p> <p>1:1</p> <p>Public Port <input type="text" value="Single port"/> <input type="text" value="1001"/> (1~65534)</p> <p>Server Port <input type="text" value="Single port"/> <input type="text" value="80"/> (1~65534)</p>	Single Port

Description	Default
N:1 Public Port <input type="text" value="A port range"/> <input type="text" value="1001"/> - <input type="text" value="1008"/> (1~65534) Server Port <input type="text" value="Single port"/> <input type="text" value="80"/> (1~65534)	
N:N Public Port <input type="text" value="A port range"/> <input type="text" value="1001"/> - <input type="text" value="1008"/> (1~65534) Server Port <input type="text" value="A port range"/> <input type="text" value="1001"/> - <input type="text" value="1008"/> (1~65534)	
<b>Server IP Address</b>	
Set up the server IP address that applies to the port mapping rule.	192.168.1.*

Common Service List for Port Forwarding			
Service name	Protocol	Starting Port	Ending Port
Customized	TCP, UDP, TCP/UDP	1~65534	1~65534
FTP	TCP	20	21
HTTP	TCP	80	80
ICUII	TCP	23566	23566
IP_PHONE	TCP	6670	6670
NetMeeting	TCP	1720	1720
News	TCP	119	119
PPTP	TCP/UDP	1723	1723
Telnet	TCP	23	23
Quakell/III	TCP/UDP	27960	27960
Real-Audio	TCP	6970	7170

### 3.1.3.4 Port Trigger

This page is used for setting up the port trigger, including configuring the Service Name, Service User, Service Type, Trigger Port, Protocol Role, Begin Port, End Port, and Status.

Port triggering is port forwarding with an on/off switch for the ports that have been forwarded. Have data flow out of a trigger port or not by enabling or disabling this functionality. Set up the time for the Port Trigger Timeout and click "Save" to save the setting.

1. Click the "Add A Trigger Rule" to add port trigger entries to the router.



🏠 FIREWALL > Port Trigger

Port Trigger Disable ▾ Port Trigger Timeout  Minute Save Add A Trigger Rule

ID	Service Name	Service Type	Inbound Connection	Service User	Status
----	--------------	--------------	--------------------	--------------	--------

- After clicking the "Add A Trigger Rule" , you will see the following page.

🏠 FIREWALL > Port Trigger

### ☰ Add A Trigger Rule

Service Name

Service User Any address ▾

Service Type TCP ▾

Trigger Port  (1~65534)

#### Inbound Connection

Protocol Role TCP/UDP ▾

Begin Port  (1~65534)

End Port  (1~65534)

Status Disabled ▾

Save Back

Description	Default
<b>Service Name</b>	
Set up the service name for port triggering. The name is composed of letters, numbers and underline, starting with a letter or number. The maximum string length is 32 bytes.	N/A
<b>Service User</b>	
Select the service user to apply the port triggering rule.	Any Address
<b>Service Type</b>	
Set up the protocol type for port triggering.	TCP
<b>Triggering Port</b>	
Set up the triggering port. The port range is 1~65534.	N/A
<b>Inbound Connection</b>	
<b>Protocol Role</b>	

Description	Default
Set up the protocol type for the inbound connection.	TCP/UDP
<b>Begin port</b>	
Set up the starting port for the inbound connection. The port range is 1~65534.	N/A
<b>End Port</b>	
Set up the ending port for the inbound connection. The port range is 1~65534.	N/A
<b>Status</b>	
Enable/disable the port triggering functionality.	Disable

3

### 3.1.3.5 URL Filter

This page is used for setting up the URL Filter, including configuring the URL Address, LAN IP Address and Status.

URL Filter is used to block particular website from the local network. Select Enable/Disable to activate/deactivate this functionality. Click the "Add An URL Address" to block the URL.

[🏠 FIREWALL > URL Filter](#)

URL Address Filter

ID	URL Address	LAN IP Address	Status
----	-------------	----------------	--------

After clicking the "Add An URL Address" , you will see the following page.

[🏠 FIREWALL > URL Filter](#)

#### ☰ Add URL

URL Address

LAN IP Address

Status

Description	Default
<b>URL Address</b>	
Manually input the URL address that you'd like to block, for example www.baidu.com.	N/A
<b>LAN IP Address</b>	
Set up the LAN IP address that you'd like to block. Options are "Any Address", "Single Address" and "Address Range".	Any Address
<b>Status</b>	
Enable/disable the URL Filter functionality.	Enable

### 3.1.3.6 MAC Filter

This page is used for setting up the MAC Filter, including configuring the MAC Address, Device Name and Status.

MAC Filter is used to block particular MAC address from the local network. Select Enable/Disable to activate/deactivate this functionality. Click the "Add A MAC Address" to block the MAC Address.

[🏠 FIREWALL > MAC Address Filter](#)

MAC Address Filter Disable ▾ Save Add A MAC Address

ID	MAC Address	Device Name	Status
----	-------------	-------------	--------

After clicking the "Add A MAC Address" , you will see the following page.

[🏠 FIREWALL > MAC Address Filter](#)

#### ☰ Add A MAC Address

MAC Address

Device Name

Status Enabled ▾

Save Back

Description	Default
<b>MAC Address</b>	
Manually input the MAC address that you'd like to block.	N/A
<b>Device Name</b>	
Set up the device name corresponding to the set MAC address.	N/A
<b>Status</b>	
Enable/disable the MAC Filter functionality.	Enabled

### 3.1.3.7 IP Filter

This page is used for setting up the IP Filter, including configuring the Source IP, Source Port, Destination IP, Destination Port, Protocol and Status.

IP Filter is used to block particular IP address from the local network. Select Enable/Disable to activate/deactivate this functionality. Click the "Add An IP Address" to block the IP Address.

[🏠 FIREWALL > IP Address Filter](#)

IP Address Filter Disable ▾ Save Add An IP Address

ID	Source IP Address Range	Source Port Range	Range Of Destination IP Address	Range Of Destination Port	Protocol	Status
----	-------------------------	-------------------	---------------------------------	---------------------------	----------	--------

After clicking the "Add An IP Address" , you will see the following page.

🏠 FIREWALL > IP Address Filter

☰ **Add An IP Address**

Source IP	<input type="text" value="Any address"/>
Source Port	<input type="text" value="Any port"/>
Destination IP	<input type="text" value="Any address"/>
Destination Port	<input type="text" value="Any port"/>
Protocol	<input type="text" value="TCP/UDP"/>
Status	<input type="text" value="Enabled"/>

Description	Default
<b>Source IP</b>	
Set up the source IP.	Any Address
<b>Source Port</b>	
Set up the source port where the datagram came from.	Any port
<b>Destination IP</b>	
Set up the destination IP.	Any Address
<b>Destination Port</b>	
Set up the destination port where the datagram is going to.	Any port
<b>Protocol</b>	
Set up the protocol type for the IP Filter.	TCP/UDP
<b>Status</b>	
Enable/disable the URL Filter functionality.	Enabled

### 3.1.4 System

You can set up the system configurations, including the User Management, Time Configurations, RS232, RS485, Modbus TCP, Log Settings, Firmware Upgrade, Backup & Restore, Scheduled Jobs, Network Diagnosis, System Reboot, Event Management, and Variable Management.

#### 3.1.4.1 User Management

You can change the administrator password here. The password must be a combination of 5 to 12 characters, numbers and/or underline symbols.

🏠 SYSTEM > User Management

### ☰ User Management

Old Password

New Password

The password must be a combination of 5 to 12 characters,numbers and underline marks

Confirm Password

Save

Cancel

Description	Default
<b>Old Password</b>	
Input the original password.	admin
<b>New Password</b>	
Input the new password you'd like to use. The password length should be 5-12 digits and is composed of lowercase letters, uppercase letters (case sensitive), numerals 0-9 and underline.	N/A
<b>Confirm Password</b>	
Again input the password you'd like to use to double confirm there is no typo.	A/A

### 3.1.4.2 Time Configurations

You can change the current time of the device. Use the dropdown list to select the correct time zone for your device.

🏠 SYSTEM > Time Configurations

#### The current time of device 2016-05-12 16:04:27

Time Zone Setting

(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi ▼


Save

Description	Default
<b>The current time of device</b>	
Here shows the current time of your device.	N/A

Description	Default
<b>Time Zone Setting</b>	
Select the operating time zone of your device: GMT-12:00 - GMT+13:00.	N/A

### 3.1.4.3 RS232

RS232 (Recommended Standard - 232) is a telecommunication standard for binary serial communications between devices. You can set up the configurations for RS232, including Baud Rate, Data Bits, Stop Bits, Parity Bits and Flow Control.

 SYSTEM > RS232

#### RS232

Working Mode	<input type="text" value="Transparent mode"/>
Baud Rate	<input type="text" value="9600"/>
Data Bits	<input type="text" value="8"/>
Stop Bits	<input type="text" value="1"/>
Parity Bits	<input type="text" value="None"/>
Flow Control	<input type="text" value="None"/>

Save

Cancel

SYSTEM > RS232

RS232

Working Mode

Baud Rate

Data Bits

Stop Bits

Parity Bits

Flow Control

Modbus ID

Modbus Mode

Modbus Timeout  (ms)

Description		Default
<b>Working Mode</b>		
Select the working mode for the current active serial port. <ul style="list-style-type: none"> <li>● <b>Transparent mode:</b> This mode is suitable for uploading and downloading data remotely via the serial port.</li> <li>● <b>Slave mode:</b> This mode is suitable for the PLC to perform the read/ write tasks on the open register of the DX-2300LN-WW.</li> <li>● <b>Close:</b> Disable this functionality.</li> </ul>		Close
<b>Parameters of COM</b>	<b>Baud Rate</b>	
	Set up the baud rate for the serial port. Options are 2400, 4800, 9600, 19200, 38400, 57600 and 115200.	9600
	<b>Data Bits</b>	
	Set up the data bits for the serial port. <ul style="list-style-type: none"> <li>● <b>Transparent mode:</b> 7, 8</li> <li>● <b>Slave mode:</b> 8</li> </ul>	8
<b>Parameters of COM</b>	<b>Stop Bits</b>	
	Set up the stop bits for the serial port. Options are 1 and 2.	1

Description		Default
	<b>Parity Bits</b>	
	Set up the parity bits for the serial port. Options are None, Odd and Even.	None
	<b>Flow Control</b>	
	Set up the flow control. Options are None, XON, XOFF, RTS, and CTS.	None
<b>Slave Mode</b>	<b>MODBUS ID</b>	
	Set up the MODBUS ID. The value is between 1 and 255.	1
	<b>MODBUS Mode</b>	
	Set up the communication mode for the device.	MODBUS RTU
	<b>MODBUS Timeout</b>	
	Set up the timeout timer from 200ms to 3000ms. If the set value is out of range, it will be automatically changed to its maximum or minimum value.	200ms

#### 3.1.4.4 RS485

RS485 (Recommended Standard - 485) is a telecommunication standard for binary serial communications between devices. You can set up the configurations for RS485, including Baud Rate, Data Bits, Stop Bits, Parity Bits, and many more.

[SYSTEM > RS485](#)

#### RS485

Working Mode

Baud Rate

Data Bits

Stop Bits

Parity Bits

Save

Cancel



☰ RS485

Working Mode

Baud Rate

Data Bits

Stop Bits

Parity Bits

Modbus ID

Modbus Mode

Modbus Timeout  (ms)

🏠 SYSTEM > RS485

☰ RS485

Working Mode

Baud Rate

Data Bits

Stop Bits

Parity Bits

Modbus ID

Modbus Mode

Modbus Timeout  (ms)

**Read/Write Configuration**

Scan Interval  (ms)

Setting Address: address is decimal, taking care to avoid conflicts with address set in other feature!

Read/Write	Slave ID	Slave Starting Address	Device Starting Address(2048-4095)	Length(1-123)	Operation
<input type="text" value="Read"/>					<input type="button" value="Delete"/>

Description		Default
<b>Working Mode</b>		
Select the working mode for the current active serial port. <ul style="list-style-type: none"> <li>● <b>Transparent mode:</b> This mode is suitable for uploading and downloading data remotely via the serial port.</li> <li>● <b>Slave mode:</b> This mode is suitable for the PLC to perform the read/ write tasks on the open register of the DX-2300LN-WW.</li> <li>● <b>Master mode:</b> This mode is suitable for the DX-2300LN-WW to perform the read/write tasks on the open register of the PLC.</li> <li>● <b>Close:</b> Disable this functionality.</li> </ul>		Close
<b>Parameters of COM</b>	<b>Baud Rate</b>	
	Set up the baud rate for the serial port. Options are 2400, 4800, 9600, 19200, 38400, 57600 and 115200.	9600
	<b>Data Bits</b>	
	Set up the data bits for the serial port. <ul style="list-style-type: none"> <li>● <b>Transparent mode:</b> 7, 8</li> <li>● <b>Modbus RTU:</b> 8</li> </ul>	8
	<b>Stop Bits</b>	
	Set up the stop bits for the serial port. Options are 1 and 2.	1
	<b>Parity Bits</b>	
Set up the parity bits for the serial port. Options are None, Odd and Even.	None	
<b>MODBUS ID</b>		
Set up the MODBUS ID. The value is between 1 and 255.		1
<b>MODBUS Mode</b>		
Set up the communication mode for the device.		MODBUS RTU
<b>MODBUS Timeout</b>		
Set up the timeout timer from 200ms to 5000ms. If the set value is out of range, it will be automatically changed to its maximum or minimum value.		200ms
<b>Master Mode</b>	<b>Scan Interval</b>	
	Set up the time for scan interval, ranging from 20ms to 60000ms.	30000ms
	<b>Read/Write</b>	
	Set up the access permissions for the mapped register address; the default is read-only.	Read
	<b>Slave ID</b>	
Set up the corresponding slave communication	N/A	

Description	Default
port. The value is between 1 and 255.	
<b>Slave Starting Address (decimal)</b>	
Set up the slave starting address (decimal) for read/write the registers in a PLC.	N/A
<b>Device Starting Address (decimal)</b>	
Set up the device starting address (decimal, starting from 2048). If the mapped address is with “Read” permission, data read from appointed registers in the PLC will be stored in this device starting address. If the mapped register address is with “Write” permission, data from the device starting address will be stored in the appointed registers in the PLC.	N/A
<b>Length (1-123)</b>	
Here displays the number of the continuous address followed by the default mapped address.	N/A
<b>Add Mappings</b>	
Click the button to add mappings; up to 100 addresses can be set up.	N/A
<b>Edit</b>	
Click an item of register mapping forms that can be edited.	
<b>Operation</b>	
The added mappings can be deleted here.	N/A

### 3.1.4.5 Modbus TCP

This page is used for configuring the Modbus TCP, including Working Mode, Server IP, Server Port, and Response Timeout.

🏠 SYSTEM > Modbus TCP

#### ☰ Modbus TCP

Working Mode

Server IP

Server Port

Response Timeout  (ms)

#### Read/Write Configuration

Scan Interval  (ms)

Setting Address: address is decimal, taking care to avoid conflicts with address set in other feature!

Add Mappings

Read/Write	Slave ID	Slave Starting Address	Device Starting Address(2048-4095)	Length(1-123)	Operation
------------	----------	------------------------	------------------------------------	---------------	-----------

Save

Cancel

Description	Default	
<b>Working Mode</b>		
The default is OFF. Other options are:	OFF	
<ul style="list-style-type: none"> <li>● <b>Modbus TCP Server (Slave):</b> for applications of a PLC to read/write the open registers in DX-2300LN-WW</li> <li>● <b>Modbus TCP Client (Master):</b> for DX-2300LN-WW to read/write the open registers in a PLC</li> </ul>		
<b>Modbus TCP Client</b>	<b>Server IP</b>	
	Set up the IP address of a PLC in the Modbus TCP Client mode	N/A
	<b>Server Port</b>	
	Set up the server port of a PLC in the Modbus TCP Client mode	502
	<b>Response Timeout</b>	
	Set up the timeout timer from 50ms to 100000ms. If the set value is out of range, it will be automatically changed to its maximum or minimum value. The default is 300ms.	300
<b>Scan Interval</b>		
Set up the time for scan interval, ranging from	30000	

	Description	Default
	20ms to 60000ms; the default is 3000ms.	
<b>Add Mappings</b>	<b>Read/Write</b>	
	Set up the access permissions for the mapped register address; the default is read-only.	Read
	<b>Slave ID</b>	
	Set up the corresponding slave communication port. The value is between 1 and 255.	N/A
	<b>Slave Starting Address</b>	
	Set up the slave starting address (decimal) for read/write the registers in a PLC.	N/A
	<b>Device Starting Address</b>	
	Set up the device starting address (decimal, starting from 2048). If the mapped address is with "Read" permission, data read from appointed registers in the PLC will be stored in this device starting address. If the mapped register address is with "Write" permission, data from the device starting address will be stored in the appointed registers in the PLC.	N/A
	<b>Length (1-123)</b>	
	Here displays the number of the continuous address followed by the default mapped address.	N/A
	<b>Operation</b>	
	Delete the selected mapped address.	N/A
	<b>Add Mappings</b>	
	Click the button to add mappings; up to 100 addresses can be set up.	N/A
<b>Edit</b>		
Click to select the records from the mapped address to edit.	N/A	
<b>Operation</b>		
The added mappings can be deleted here.	N/A	

### 3.1.4.6 Log Settings

This page is used for configuring the log settings, including Log to Console, Remote Log Service, Remote Log Server Address, and Port of Remote Log Server.

🏠 SYSTEM > Log Settings

#### ☰ Log Settings

Log To Console

Remote Log Service

Remote Log Server Address

Port Of Remote Log Server  (1~65534)

Save

Cancel

Description	Default
<b>Log to Console</b>	
Set up the log to the console port.	No
<b>Remote Log Service</b>	
Enable/disable the remote log service.	Disable
<b>Port of Remote Log Server</b>	
Set up the remote log server port, ranging from 1 to 65534.	514

#### Notice



Remote log service is used for qualified engineers to check the device remotely when errors occurred. With this service, there is no need to log in to the device, device logs can be exported to the remote log server. The server should support the syslog protocol. When this functionality is enabled, it will take up some resources. Do not enable this functionality disabled, unless it's necessary.

### 3.1.4.7 Firmware Upgrade

This page is used for upgrading the system.

🏠 SYSTEM > Firmware Upgrade

☰ Firmware Upgrade

DO NOT turn off the power supply or reboot the device during the upgrade process. Please select the correct firmware package which is consistent with the device model, otherwise the device may be damaged !

(Before upgrade the firmware, please backup the settings and data. Please contact the local dealers or manufacturers when failed to upgrade the firmware)

Select Firmware

Description	Default
<b>Select Firmware</b>	
Click "Browse" to select the new firmware file.	N/A
<b>Upgrade</b>	
Click "Upgrade" to upgrade firmware. The device will reboot after the upgrade is done.	N/A

### 3.1.4.8 Backup & Restore

This page is used for backing up and restoring the configurations.

🏠 SYSTEM > Backup & Restore

☰ Backup & Restore

Device configurations can be backed up and saved to local PC

Configuration restoration will remove the current settings in the device and restore the configurations in your .cfg file

Select .Cfg File

Configurations will be reset to the factory default settings, device will be reboot after the reset

Description	Default
<b>Backup</b>	
Click "Backup" to save the device configurations on your computer.	N/A
<b>Restore</b>	
Click "Browse" to select the backup file and then click "Restore" to restore the configurations. The device configuration will be restored to the previous version and the device will reboot after the restoring is done.	N/A
<b>Restore To Factory Default</b>	
Click "Restore To Factory Default" to reset the configurations to the factory	N/A

Description	Default
defaults. The device will reboot after the reset is done.	

### 3.1.4.9 Scheduled Jobs

This page is used for scheduling job configurations, including ADD A New Job, Export Job List, and Import Job List.

🏠 SYSTEM > Scheduled Jobs

ID	Job Name	Job Type	Timestamp	Enabled
----	----------	----------	-----------	---------

3

#### 3.1.4.8.1. Add A New Job

Click "Add A New Job" , and then you will see the following page. Follow the instruction to add a new scheduled job.

🏠 SYSTEM > Scheduled Jobs

#### ☰ Add A New Job

Job Name

Enabled

**Time Configurations**

---

Recurring Job   Hour  Minute

Date  Year  Month  Day

---

Job Type

Description	Default
<b>Job Name</b>	
Set up a name for your scheduled job. The name shall be composed of letters, numbers and underline, starting with a letter or number. The maximum string length is 32 bytes.	N/A
<b>Enable</b>	
Select "Enable" to activate this functionality.	Enable
<b>Recurring Job</b>	
The scheduled job can be done Once, Every day, Every week, or Every month. And the specific time can be further defined.	Once 01:00
<b>Date</b>	



Description	Default
Select a specific date to perform the scheduled job.	2015.01.01
<b>Job Type</b>	
Select one of the job type for the scheduled job. <ul style="list-style-type: none"><li>● Restart device</li><li>● Enable DIACloud Service</li><li>● Disable DIACloud Service</li></ul>	Restart device

**3.1.4.8.2. Export Job List**

Click "Export Job List" to export the scheduled jobs for future usage.

SYSTEM > Scheduled Jobs

Buttons: Add A New Job, Export Job List (highlighted), Import Job List, Browse...

ID	Job Name	Job Type	Timestamp	Enabled
----	----------	----------	-----------	---------

**3.1.4.8.3. Import Job List**

Click "Chose file" to select the scheduled jobs file you have saved and then click "Import Job List" to import the scheduled jobs you have set before.

SYSTEM > Scheduled Jobs

Buttons: Add A New Job, Export Job List, Import Job List (highlighted), Browse...

ID	Job Name	Job Type	Timestamp	Enabled
----	----------	----------	-----------	---------

### 3.1.4.10 Network Diagnosis

This page is used for diagnosing the network status; methods are Ping Test and Route Trace.

🏠 SYSTEM > Network Diagnosis

#### ☰ Network Diagnosis

Diagnosing Method

Host Name/IP Address

3

Description	Default
<b>Diagnosing Method</b>	
Select the Diagnosing Method; options are Ping Test and Route Trace.	Ping Test
<b>Host Name/IP Address</b>	
Input the Host Name or the IP Address.	N/A
<b>Start</b>	
Click “Start” to start the network diagnosing. While running the network diagnosing, the settings cannot be changed.	N/A
<b>Stop</b>	
Click “Stop” to stop the network diagnosing. After stopping the network diagnosing, the settings can be changed.	

### 3.1.4.11 System Reboot

This page is used for manually rebooting the system. Click "Restart Device" and the system will reboot.

🏠 SYSTEM > System Reboot

#### ☰ System Reboot

The network will be temporarily shut down during system reboot, please wait! Restart Device

### 3.1.4.12 Event Management

This page is used for setting up 2 types of events, Communication Verification and Alarm Event.

- **Communication Verification:** when the slave (such as PLC) is connected with a router via MODBUS TCP or MODBUS RTU, the router checks whether the tunnel is a reliable connection-critical lock or not.

Communication verification expression between PLC and the router can be set here. The expression is the numeric expression in C, complying with the standard C programming syntax. The expression can be a single variable, a constant, or a single variable equation. The name of the variable is limited to "A", and the expression should be something like this  $(A+100)*45$ .

🏠 SYSTEM > Event Management

#### ☰ Event Management

Event Type

Input Expression  Save



The expression is the numeric expression in C, the syntax complies with standard C programming syntax. The expression can be a single variable itself, or a constant, or a single variable equation. The name of the variable is limited to be "A", the expression can be:  $(A+100)*45$

The operators that the expression supports are as below:

Operators	Types	Examples	Description
+	Arithmetic operator	A+100	Addition
-	Arithmetic operator	A-100	Subtraction
*	Arithmetic operator	A*100	Multiplication
/	Arithmetic operator	A/100	Division
&	Logic operator	A&A+100	Logic AND
	Logic operator	A A+100	Logic OR

()	Bracket operator	(A+100)*45	Change operation order
^	XOR operation	A^100	XOR operation

- **Alarm Event:** Click “Add” to set a new alarm event, input the Alarm Name, Description, Alarm Criteria, Event Interval, Repeat Times, Alarm Content and Target Receiver. Click “Details” to modify the existing alarm. Click “Delete” to delete the existing alarm.

🏠 SYSTEM > Event Management

☰ Event Management

Event Type



Add

Alarm Name	Alarm Description	Alarm Criteria	Target Receiver	Operation
------------	-------------------	----------------	-----------------	-----------

After clicking “Add”, the following page will show up.

🏠 SYSTEM > Event Management

☰ Alarm Event

Alarm Name

Alarm Description

Alarm Criteria

Event Interval  (0~6000)minute

Repeat Times  (0~999)times

Alarm Content  Time Date Name Description

Target Receiver

Max support 5 reciever,use ';' to seperate the different email address

Description	Default
<b>Alarm Name</b>	
Input an alarm name. The name shall be composed of numbers, English letters, uppercase and lowercase. The maximum string length is 32 bytes.	N/A

Description	Default
<b>Alarm Description</b>	
The alarm description shall be composed of numbers, English letters, uppercase and lowercase. The maximum string length is 50 bytes.	N/A
<b>Alarm Criteria</b>	
The format of alarm variable is {\$number 0-4095}, the alarm criteria can be a single alarm variable, or a formula of one or several alarm criteria. For example, the formula can be: {\$2003}+{\$2004}*100/2-1.	N/A
<b>Event Interval</b>	
The time interval of alarm sending	0
<b>Repeat Times</b>	
The repeated times of alarm sending	0
<b>Alarm Content</b>	
<p>Set up the information shown on the alarm contents. The content of the alarm will be sent to the target when alarm criteria are met. The information order can be self-defined.</p> <ul style="list-style-type: none"> <li>● <b>Time:</b> the time when the alarm occurred</li> <li>● <b>Date:</b> the date when the alarm occurred</li> <li>● <b>Name:</b> the name of the occurred alarm</li> <li>● <b>Description:</b> the description of the occurred alarm</li> </ul> <p>For example, Register \$2003 represents electrical voltage, the value of register \$2003 is 10, and the alarm content is set as: {Date} {Time} Voltage = {\$2003}, then the alarm content received by users will be: 2015/06/01 10:00:00 Voltage = 10. The maximum content length is 160 characters.</p>	N/A
<b>Target Receiver</b>	
Set up the recipient. The alarm notification will be sent via email, up to 5 email addresses can be used and separate each recipient with a semicolon.	N/A



### Notice

{ } is a special system symbol, which is used to reference system variables or system registers, like \${Time}, \${Date} or \${Number 0 - 4095}. Please use it with caution.

#### 3.1.4.13 Variable Management

This page is used for setting up the variables. Click "Add" to set a new variable. Click "Edit" to modify the existing variable. Click "Delete" to delete the existing variable.

[SYSTEM](#) > [Variable Management](#)

Add Variables

ID	Variable	Alias	Length	Upload To Cloud	History Data
----	----------	-------	--------	-----------------	--------------

The address segment 2048~4095 can be self-defined. The Variable Name, Alias, Length, and Uploaded to Cloud can be set up.

After clicking “Add”, the following page will show up.

🏠 SYSTEM > Variable Management

☰ Add Variables

Variable Name  (\$2048-4095)


Alias

Length

Uploaded To Cloud  ▼

Keep History  ▼

Description	Default
<b>Variable Name</b>	
Register address. The allowable range is 2048~4095. Start with \$.	N/A
<b>Alias</b>	
Input a variable name. The name shall be composed of numbers, English letters, uppercase and lowercase. The maximum string length is 30 bytes.	N/A
<b>Length</b>	
To register as a unit. If you input 1 in length field, it is meaning one register (16bit) will be created. Effective range: 1-2048.	N/A
<b>Uploaded To Cloud</b>	
Whether to upload the variable information into Cloud.	Yes
<b>Keep History Data</b>	
This function will keep or overwrite the history data when the register values are uploaded to Cloud. <ul style="list-style-type: none"> <li>● <b>Yes:</b> The existed register values in the cloud <b>WON'T</b> be overwritten by the new uploaded register values.</li> <li>● <b>No:</b> The existed register values in the cloud <b>CAN</b> be overwritten by the new uploaded register values.</li> </ul>	No



**Notice**  
When the values in the register changes, the results will be uploaded to cloud.

### 3.1.5 Cloud Service

You can log in to the DIACloud Service. Input the user name, the password and click “Verify”. Refer to Chapter 4 for DIACloud account registration.

[🏠 CLOUD SERVICE > Cloud Configurations](#)

#### ☰ Cloud Configurations

User Name:

Password:

Verify

#### ⚠ Notice



If the account cannot be verified or bound, please check the followings:

1. The WAN can be connected to the internet.
2. If there are firewalls, open the following communication ports:
  - TCP : 80, 10001, 22000, 22003, 22012, 22013, 22016, 22018
  - UDP : 53, 123, 10001, 22000, 22013, 22016, 22018

After clicking “Verify”, the following page will show up. The contents here can be further defined. Clicking “Bind” to have the device connected to the Cloud, and then you can open the web management page to configure and manage the device remotely via the DIACloud platform.

[🏠 CLOUD SERVICE > Cloud Configurations](#)

#### ☰ Cloud Configurations

User Name:

Password:

Verify

Secure Tunnel:

Device Name:

Secure Tunnel DHCP:

Available

When secure tunneling DHCP server is available, and the IP address is allocated by the DHCP server in secure tunnel network, the IP address of this device can be found in the cloud portal

Get IP From Cloud

Bind

Cancel

If don't obtain IP from Cloud, will request you manual setup the IP for device.

Get IP From Cloud

No ▾

Cloud IP Range:

192.168.200.100 - 192.168.200.200

Cloud Netmask:

255.255.255.0

Device IP:

( Device IP should be in the same subnet with cloud IP )

Description	Default
<b>User Name</b>	
Set up the name for the DIACloud account.	N/A
<b>Password</b>	
Set up the password for the account.	N/A
<b>Verify</b>	
Check if the username and the password are matched.	N/A
<b>Secure Tunnel</b>	
Select the device under the account to join in a certain secure tunnel network group. For secure tunnel related settings, go to <a href="http://www.DIACloudSolutions.com/">http://www.DIACloudSolutions.com/</a>	Default
<b>Device Name</b>	
Set up the name for the device	N/A
<b>Secure Tunnel DHCP</b>	
When secure tunneling DHCP server is available, and the IP address is allocated by the DHCP server in secure tunnel network, the IP address of this device can be found in the cloud portal.	N/A
<b>Get IP From Cloud</b>	
When selecting "Yes", IP address can be obtained by the cloud. When selecting "No", the IP address can be manually set. Page will display IP range for user reference.	Yes
<b>Cloud IP Rang</b>	
Display the Cloud IP Range. The Cloud IP Range is depended on the secure tunnel setting. For the secure tunnel setting, please refer to 5.2.5 Tunnel Network.	N/A
<b>Cloud Netmask</b>	
Display the Cloud Netmask. The Cloud Netmask is depended on the secure tunnel setting. For the secure tunnel setting, please refer to 5.2.5 Tunnel Network.	N/A
<b>Device IP</b>	
User can assign a IP address for this device, the IP should be in the same	N/A



Description	Default
subnet with Cloud IP.	

The following page will show up after bind successfully. You can also select “Unbind” to free the device from the Cloud.

🏠 CLOUD SERVICE > Cloud Configurations

User Name:	1 [REDACTED] 0@163.com	
Registration Status:	Registered	<input type="button" value="Unbind"/>
Service Status:	Disabled	<input type="button" value="Enable"/>
Secure Tunnel:	default	
Device Name:	DX2300_334D	
Secure Tunnel DHCP:	Available	
Get IP From Cloud	Yes	

### Notice



- Users can log in to <http://www.DIACloudSolutions.com/> and register for a DIACloud account.
- If the IP is obtained from the Cloud, users can log in to the DIACloud and check for the device IP address after configuration.
- Device IP will change after activation. Please use new IP to access the device and insure your computer's IP is in same subnet with new device's IP, or use domain **www.diadevice.com** to access the device and insure you use the automatically obtained IP address and DNS server for the computer.
- In rare case, you can't access the web because the computer did not refresh the IP and DNS after the activation, please re-plug the cable to resolve the issue.

## 3.2 SD Card Quick Installation

User can perform below operation via SD Card function.

- Upgrade device firmware
- Import device configuration
- Activate device with the DIACloud account.

Trigger process as below:



- When device reboot and detect SD card
- If SD card exists upgrade-package file, then trigger to upgrade device firmware base on this file
- If SD card exist file 'backup.cfg', then trigger to import device configuration base on this file
- If SD card exist file 'Provision.bin', then trigger to activate device with the account provide by this file, even device has been activated before.

The operate result will cause in buzzer beep as below. (× – fail, √ - success or not this operation)

Buzzer action	upgrade	backup.cfg	Provision.bin
1 long beep	×	√	√
1 long beep and 1 short beep	√	×	√
1 long beep and 2 short beep	×	×	√
1 long beep and 3 short beep	√	√	×
1 long beep and 4 short beep	×	√	×
1 long beep and 5 short beep	√	×	×
1 long beep and 6 short beep	×	×	×
None	√	√	√

User can generate file 'backup.cfg' by function 3.1.4.8.

How to create and bind the DX-Series with SD Card.

1. Go to the DIACloud platform [www.DIACloudSolutions.com](http://www.DIACloudSolutions.com).
2. Log in the DIACloud webpage, and click [SECURE TUNNELS]
3. Click to select the Network you'd like to use and then click the  to see and check the details.
4. Click the  to download the generated Provision.bin to the local computer.

#	Network Name ↑	DHCP	DHCP IP Range	Data	Status	Operation
1	test	Disable	192.168.200.100 192.168.200.200	1.90 GB	Normal	...

Total 1 virtual network(s)



Network Name

default

DHCP



DHCP IP Start

5. Copy Provision.bin file to SD card.
6. Power off the device and then insert the SD card into the device. Turn on the device and it will automatically bind. Check the SD card status indicator to see if the binding is successful.

### Notice



- Please do not change the file name of firmware upgrade-package.
- Please do not copy more than 1 firmware upgrade-package file to SD Card, to avoid the device be upgrade base on random upgrading file.
- Import the second profile has to wait for 10 minutes if the first profile already imported.

---


## Chapter 4 DIACom

### Table of Contents

<b>4.1</b>	<b>Introduction to DIACom .....</b>	<b>4-2</b>
4.1.1	Select a Suitable Firmware Version .....	4-2
4.1.2	DIACom Installation.....	4-3
4.1.3	DIACloud Account Registration.....	4-3
4.1.4	Bind DIACloud Account.....	4-5
4.1.5	Setup a Secure Tunnel .....	4-6
4.1.6	Remote Control and Monitoring via DIACom.....	4-8

## 4.1 Introduction to DIACom

DIACom allows you to create a secure tunnel between your PC and router, making it possible for your PC to communicate remotely with the devices connected to the router. Thus engineers can control, monitor, operate, program and diagnose the device remotely whenever there is internet connectivity.

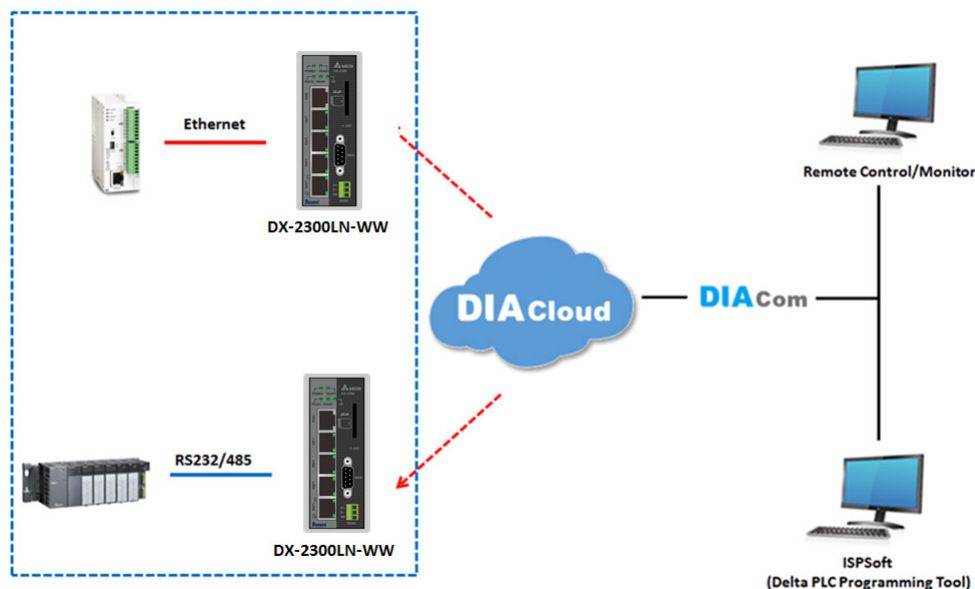

### Notice



- DIACloud provides you with cloud services, including the connected device management, secure tunnel network creation, data upload/download, and directional transmission.
- If you need to configure or monitor your controller, you will need to install programmable logic controller software, for example WPLSoft/ISPSOft for Delta PLC.

### 4.1.1 Select a Suitable Firmware Version

Find a suitable DIACom firmware version according to the following table below for your router.

Corresponding Table:

Device Model	Firmware Version
DX-2100	V1.3.0.1 or above
DX-2300	V1.0.0.1 or above

## 4.1.2 DIACom Installation

Obtain the DIACom firmware package from the official website or from our sales representative. Administrator privileges are required to run and install the package. Uninstall older versions of DIACom before downloading new DIACom firmware package.



### Notice

DIACom supports Windows XP, Windows 7 (32-bit and 64-bit) and Windows 8 (32-bit and 64-bit).


## 4.1.3 DIACloud Account Registration

1. Before registration, you should have a valid email account. (DIACloud uses your email address as your account.)
2. Open the DIACloud web page (<http://www.DIACloudSolutions.com>). The system will redirect you to the registration page:

The screenshot shows the DIACloud registration page. At the top left is the 'DIACloud' logo. In the top right corner, there is a globe icon. The registration form is centered and includes the following elements: an email input field with a red asterisk, a password input field with a red asterisk, a 'Remember Me' checkbox which is checked, and a grey 'LOGIN' button. Below the form, there are two links: 'CREATE AN ACCOUNT' and 'FORGOT PASSWORD?'. On the far right edge of the page, there is a large black box with the number '4' in white.



### Notice

\*Click  at the upper right corner to change the interface language to English.

3. Input your email address, password and other relevant information on the registration page. Select "I Agree" and click "CREATE AN ACCOUNT".

**DIACloud**

Email \*

Password \*

Confirm Password \*

Person  Enterprise

Name \*

Country


Verification Code \* 6E2I6

I Agree **AGREEMENT**


CREATE AN ACCOUNT

Already have an account? **LOGIN**

4. After clicking “CREATE AN ACCOUNT”, a congratulation page will be prompted and an activation email will be sent to the email address you have used as your DIACloud account.

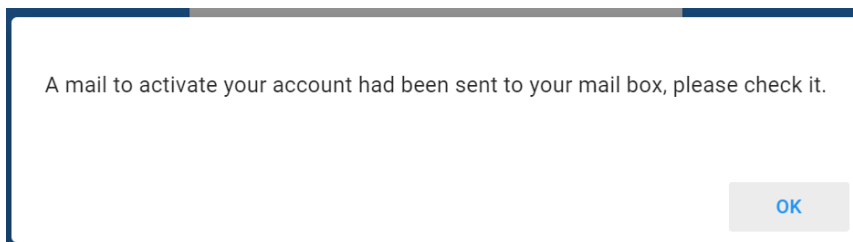

5. You will find an activation email sent from [no-reply@diacLOUDSOLUTIONS.COM](mailto:no-reply@diacLOUDSOLUTIONS.COM) in your email box. Open the email, click “here” link in the email and complete DIACloud account activation operation. And you will be redirected to the DIACloud login page. Input your account and password to log in to the DIACloud.

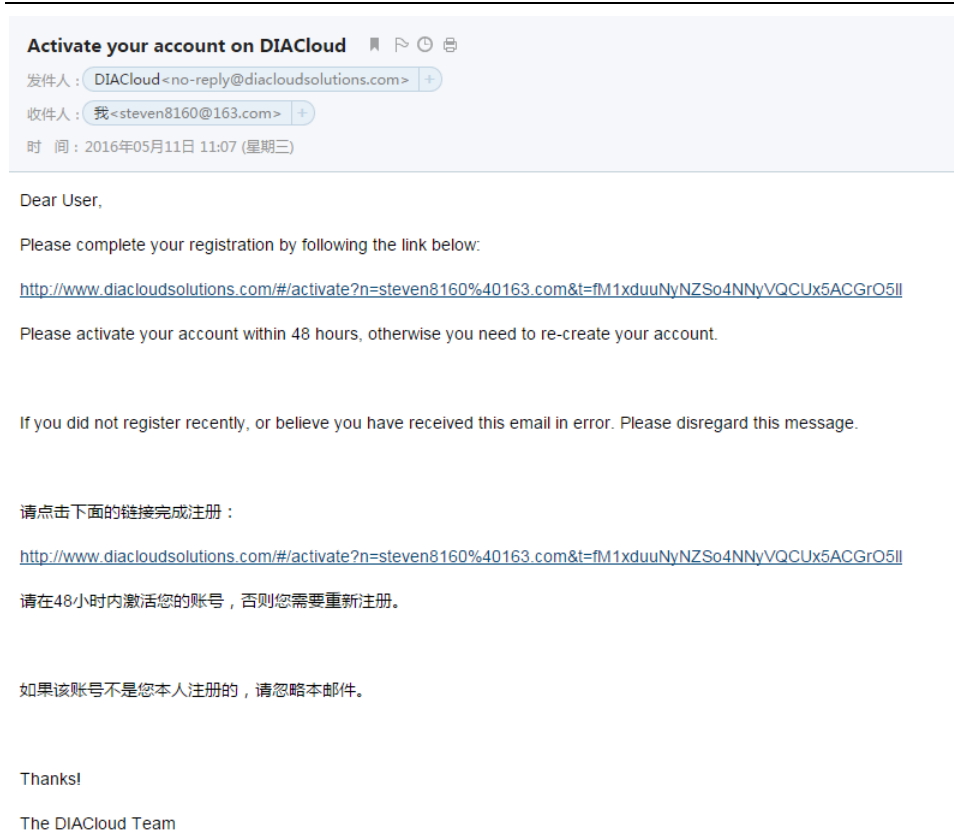

#### 4.1.4 Bind DIACloud Account

Follow the steps blow to bind your DIACloud Account.

1. Local Network Setups : Please refer to Chapter 2.1 to 2.1.3 Web-based GUI Configuration for more information.
2. Bind DIACloud Account : Please refer to Chapter 3.1.5 Cloud Service for more information.

**Notice**

- **Secure Tunnel** : Secure tunnel is a virtual network. Users can set up several groups of secure tunnel for easier device management.
- **Device Name**: the serial number + “\_” + “Mac address” of the device is the device name by default.
- **Get IP From Cloud**:
  - When selecting “Yes”: The system will assign an IP address for the device according to the Secure Tunnel settings and the availability of the IP addresses. Take note of the assigned IP address, it will be used when logging to the DIACloud.
  - When selecting “No”: The IP address can be manually set.

Secure Tunnel DHCP:	Available
Get IP From Cloud	<input type="button" value="No"/>
Cloud IP Range:	192.168.200.100 - 192.168.200.200
Cloud Netmask:	255.255.255.0
Device IP:	<input type="text"/>

( Device IP should be in the same subnet with cloud IP )

The IP address of the DX-2100 Series and the WAN of your connected PC should be in




different network segments.

### 4.1.5 Setup a Secure Tunnel

Make sure there is internet connectivity, before creating a secure tunnel between your local PC and router via the DIACom. Http Proxy and Port Agent are configurable in DIACom network setting function, you can set it to avoid the possible limitation.


1. Run DIACom and log in with your router's cloud account.

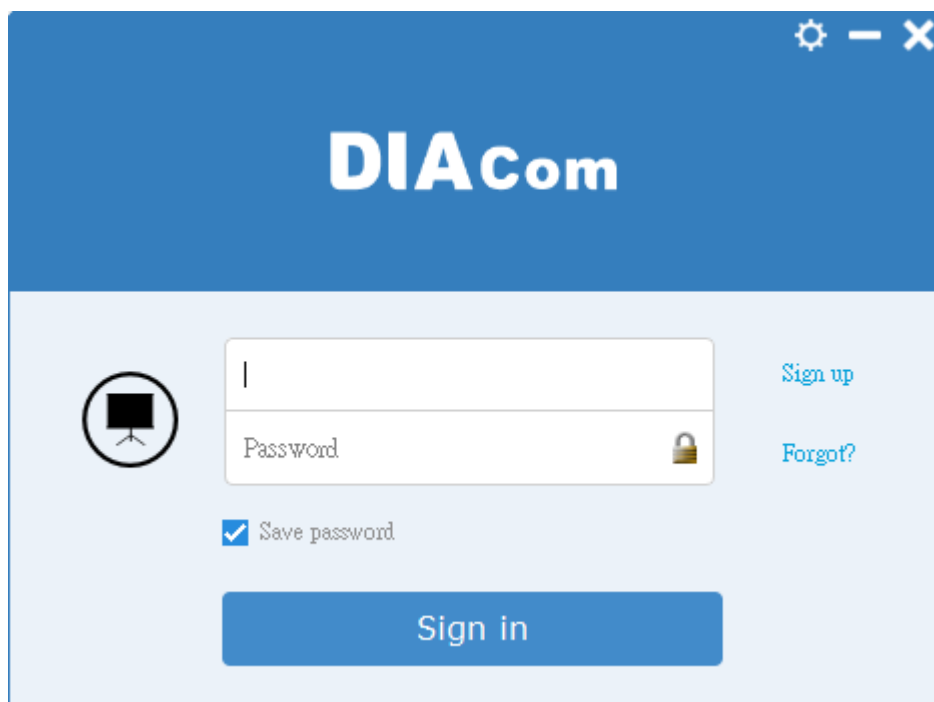

2. Click  to go into network setting page if need be.



- **Http proxy:** Please fills in the proxy server address, port, username and password if the LAN needs to set the proxy to access the Internet.
  - **Port Agent:** When the firewall of LAN prohibit some ports which DIACom will use, such as 22013, select this option, DIACom will use the port 443 to send and receive data to the original port, to avoid the restrictions of the firewall.
  - These two options can be select simultaneously. The list of port which used by DIACom is in appendix.
3. Add a virtual IP address and subnet mask for your computer. You can use DHCP to obtain an IP address automatically or manually set the IP address. Be sure to set the IP address in the same network segment as your router's, for example, your router IP is 192.168.200.6, and the computer's virtual IP should be set to 192.168.200.xxx.

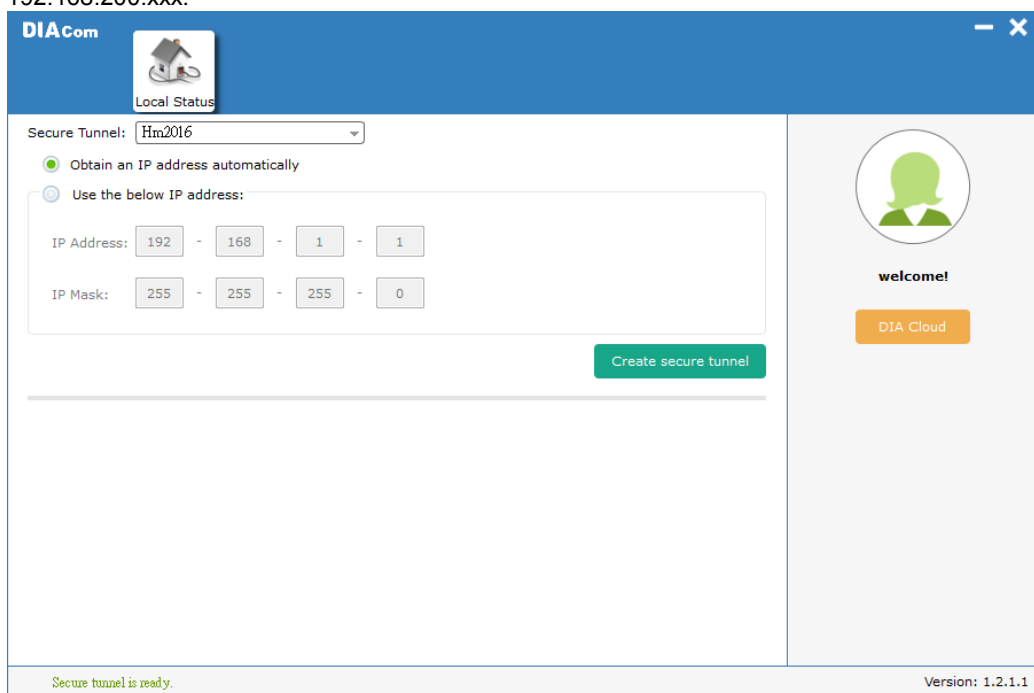


4. Select the same group of VLN, same as your router's group (refer to 3.1.5 Cloud Service for details) and specify an IP address with the same network segment of your router IP and the virtual IP of the computer (); or select "Obtain an IP address automatically".

### Notice



Secure Tunnel is a virtual network. Users can create various secure tunnel groups and design different devices to the appointed groups for easier group management. When your DIACloud account is successfully registered, the system will assign a new secure tunnel group named default for your router.

5. Click "Create secure tunnel" and the following image will show up, indicating the creation is successful. Whenever there is internet connectivity, you can use programmable logic controller software to control, monitor, operate, and program your PLC and open your router's webpage (simply input your router's IP in the search bar of a browser) to configure your router remotely.
6. Click "Disconnect" or exit from the DIACom to close the secure tunnel.

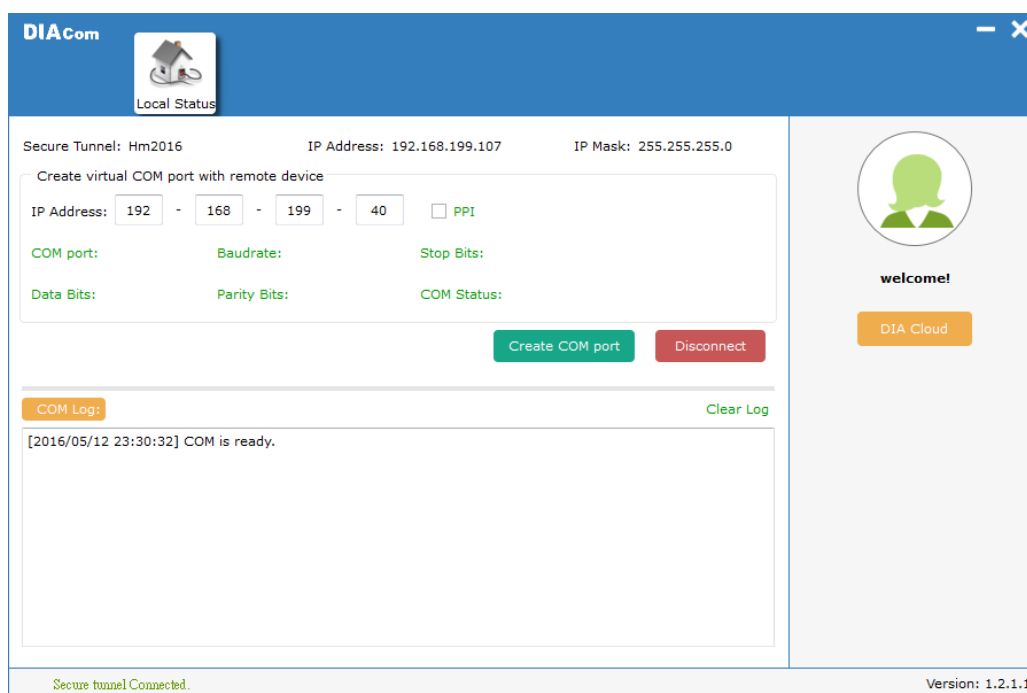

## 4.1.6 Remote Control and Monitoring via DIACom

### 4.1.6.1 Via a LAN Port

If your router is connected to remote devices via a LAN port, you can use the configuring/monitoring software on your local computer to configure and monitor after opening a virtual tunnel. Some program would require the IP addresses of your remote device. Simply input the required information in the configuring/monitoring software and then you can configure and monitor the connected device remotely.


### 4.1.6.2 Via a RS232/RS485 Port

After opening a virtual tunnel, you will need to follow the setups below before using WPLSoft or other configuring/monitoring software on your local computer to configure and monitor the connected device remotely.

1. Open a browser and input the IP address of the router which is connected to your remote device on the search bar and then log in.
2. Go to the System setup page, select the setup option RS232 or RS485 and input the required information to set up. Make sure the parameters are consistent with your remote device.
  - Working Mode : Transparent mode
  - Parameters of COM (Baud Rate, Data Bits, Stop Bits, Parity Bits, Flow Control)

Working Mode	Transparent mode ▾
Baud Rate	9600 ▾
Data Bits	8 ▾
Stop Bits	1 ▾
Parity Bits	None ▾
Flow Control	None ▾

- Go back to the DIACom and input the IP address of the router which is connected to your remote device. Click “Create COM port” to create a virtual tunnel. Once the creation is done, the virtual IP address will show up on the same page. Users can use this IP address to connect to your local computer and then you can use the configuring/monitoring software to configure and monitor the connected device remotely. Click “Delete COM port” to close the virtual tunnel.

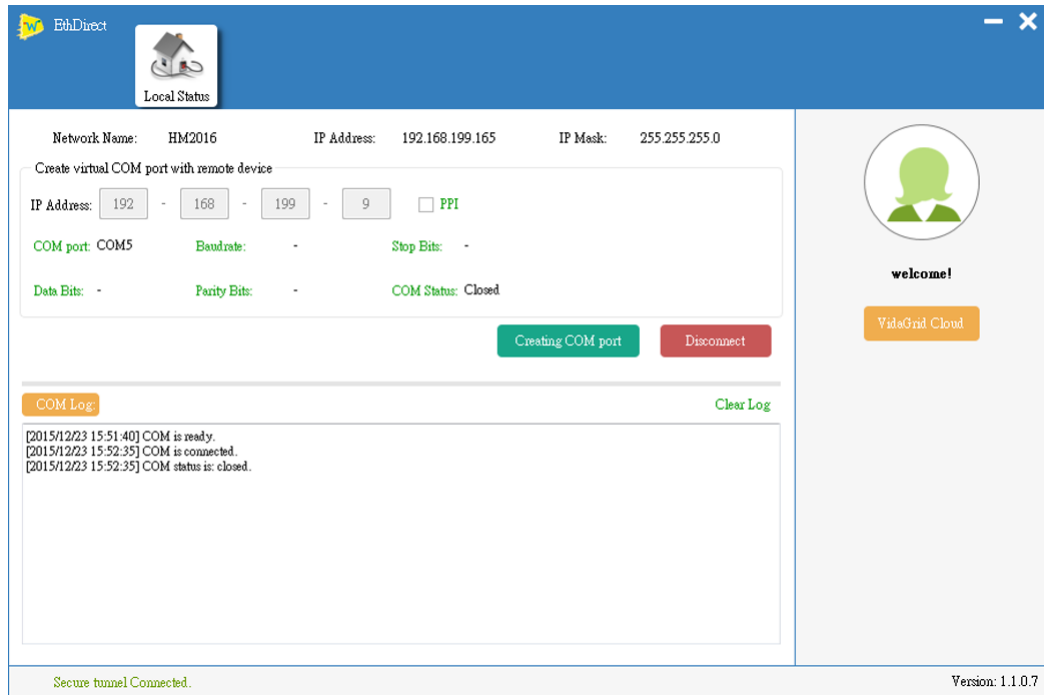

### Notice



If the PLC is Siemens S7-200, you can select the “PPI” in the DIACom to support PPI protocol.

- Open the WPLSoft to check if the COM parameters are consistent with the settings on your router. When these parameters are consistent, you can use the WPLSoft to configure/monitor your device remotely.

Communication Setting

Connection Setup  
Type: RS232

Communication Setting  
COM Port: COM5  
 ASCII  
 RTU (8 bits)  
Data Length: 8  
Parity: Even  
Stop Bits: 1 [Auto-detect]  
Baud Rate: 9600  
Station Address: 1 [Default]

Ethernet Setting  
 Assign IP: 192.168. 1. 5  
Port: 502

Baud Rate Decided by  
 PLC Setting  
 WPL Setting

Setup Responding Time  
Times of Auto-retry: 3  
Time Interval of Auto-retry (sec.): 3

OK Cancel

4

---

## Chapter 5 DIACloud

### Table of Contents

<b>5.1</b>	<b>Introduction to DIACloud .....</b>	<b>5-2</b>
5.1.1	Select a Suitable Firmware Version .....	5-2
<b>5.2</b>	<b>Instructions for DIACloud.....</b>	<b>5-2</b>
5.2.1	Register and Login .....	5-2
5.2.2	Home .....	5-4
5.2.3	Devices .....	5-6
5.2.4	Alarm .....	5-14
5.2.5	Secure Tunnels .....	5-15
5.2.6	Sub Users .....	5-16
5.2.7	Logs.....	5-19
5.2.8	Orders .....	5-20
5.2.9	Profile .....	5-21

## 5.1 Introduction to DIACloud

DIACloud Web is a web portal of DIACloud cloud platform. Users can check the status of connected industrial device through DIACloud Web, browse data that has been collected, receive warnings, notices and other messages that are sent by cloud platform, create and manage sub-account and virtual safety network and check login and interface logging, to improve the manageability of devices, optimize the device performance and efficiency, save the operation cost and enhance the service quality.

### 5.1.1 Select a Suitable Firmware Version


Please confirm that your Firmware version of router meets the requirements in the following table before use:

Device Model	Firmware Version
DX-2100	V1.3.0.1 or above
DX-2300	V1.0.0.1 or above

## 5.2 Instructions for DIACloud

### 5.2.1 Register and Login


1. Open the DIACloud web page (<http://www.DIACloudSolutions.com>). If you have got an account, input your account and password in the following page to log in; if you have not got an account, click "CREAT AN COUNT" to register. Then the system will redirect you to the registration page:

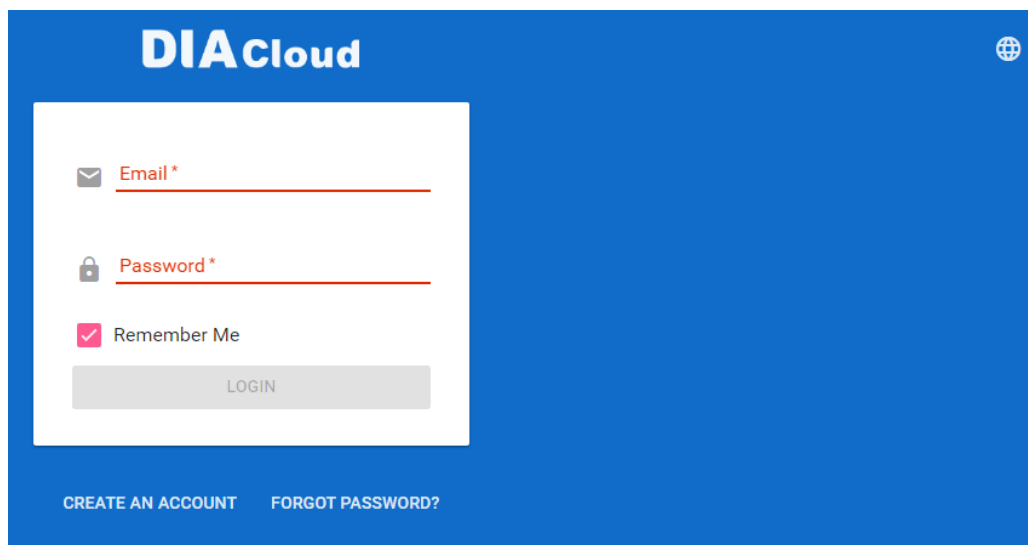

**Notice**

Click at the upper right corner to change the interface language to English or Chinese.

2. Input your email address, password and other relevant information on the registration page. Select "I Agree" and click "CREATE AN ACCOUNT". Pls insure your region information is correct, otherwise it maybe cause problem in payment when you extend your service.

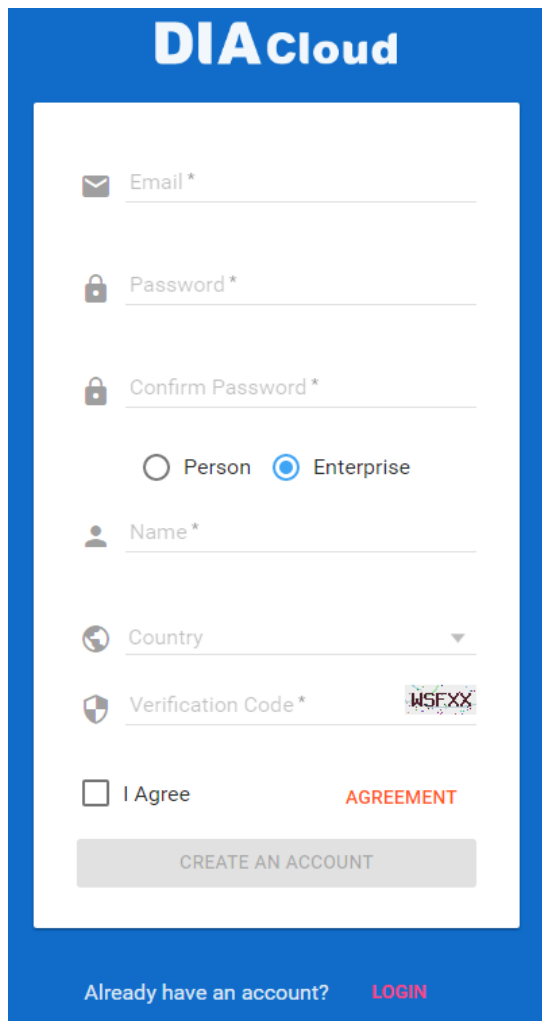


The screenshot shows the DIACloud account creation interface. It features a blue header with the 'DIACloud' logo. Below the header is a white form with the following fields and options:

- Email\* (text input)
- Password\* (password input)
- Confirm Password\* (password input)
- Account type selection:  Person,  Enterprise
- Name\* (text input)
- Country (dropdown menu)
- Verification Code\* (text input with a placeholder 'WSFXX' and a refresh icon)
- I Agree  (checkbox) and AGREEMENT (text)
- CREATE AN ACCOUNT (button)

At the bottom of the form, there is a link: 'Already have an account? LOGIN'.


3. After clicking "CREATE AN ACCOUNT", a congratulation page will be prompted and an activation email will be sent to the email address you have used as your DIACloud account.

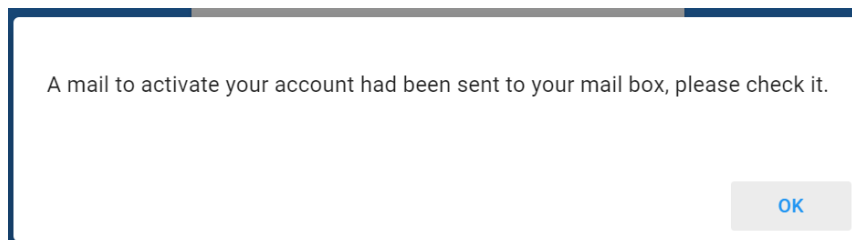

4. You will find an activation email sent from [web@DIACloudSolutions.com](mailto:web@DIACloudSolutions.com) in your email box. Open the email, click "here" link in the email and complete DIACloud account activation operation. And you will be redirected to the DIACloud login page. Input your account and password to log in to the DIACloud.



5

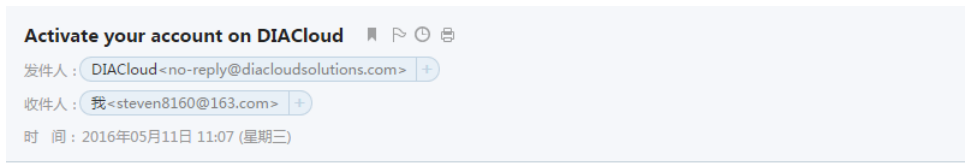

Dear User,

Please complete your registration by following the link below:

<http://www.diacloudsolutions.com/#/activate?n=steven8160%40163.com&t=fM1xduuNyNZSo4NNyVQCUX5ACGrO5II>

Please activate your account within 48 hours, otherwise you need to re-create your account.

If you did not register recently, or believe you have received this email in error. Please disregard this message.

请点击下面的链接完成注册：

<http://www.diacloudsolutions.com/#/activate?n=steven8160%40163.com&t=fM1xduuNyNZSo4NNyVQCUX5ACGrO5II>

请在48小时内激活您的账号，否则您需要重新注册。

如果该账号不是您本人注册的，请忽略本邮件。


Thanks!

The DIACloud Team





- Open the DIACloud web page (<http://www.DIACloudSolutions.com>). Log in using your account that you have registered.
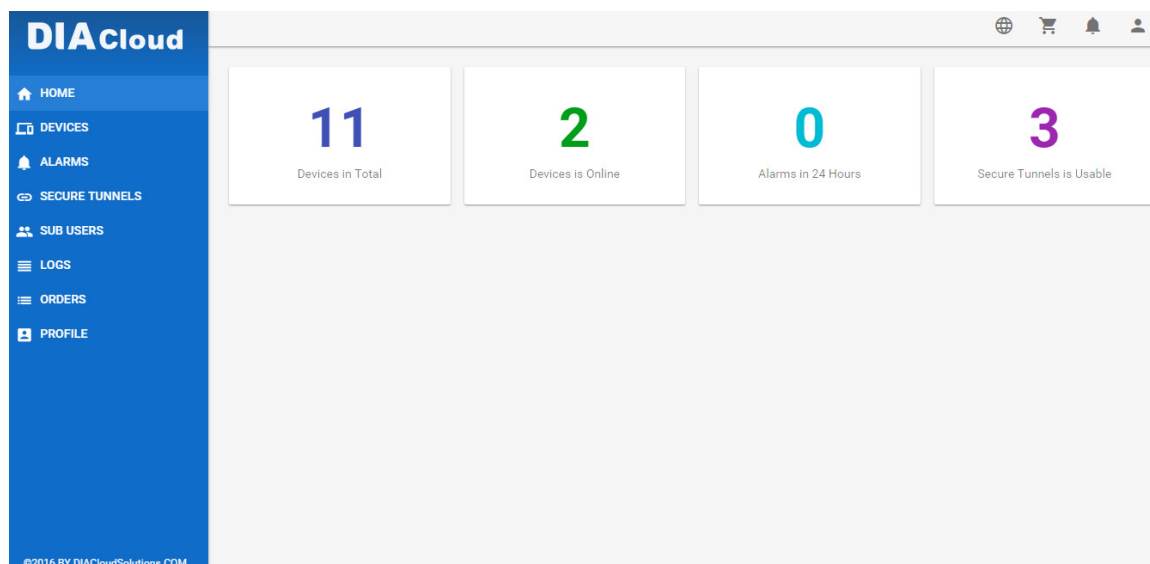
### 5.2.2 Home


The Home Page will show up after login.





Item	Description
Menu	User can switch to corresponding function through menu on the left.

Devices Total	The number of total devices
Devices is Online	The number of total online devices
Alarms in 24 Hours	The number of alarms in Recently 24 hours
Virtual Usable Networks is	It will show the number of Secure Tunnel groups under the account.
	Switching among the Chinese and English
	Show the service package you selected, user can add package to shopping cart through Devices function and Profile function.
	Show the alarm message(s) in latest 7 days
	Show the profile or logout

Online payment process as below:

After click , it will show the detail in shopping cart.

Shopping Cart ↻

#	Package Name	Unit Price	Number	Price	Operation
1	<b>DX-Service-T1GB-WW</b> ( SN : DX21000216140002 ) Data traffic fee of 1-year package for 1G bytes extra traffics per month between device and DIACloud	\$ 0.01	4	\$ 0.04	
2	<b>DX-Service-S1MB-WW</b> Cloud Storage fee of 5-years package for 200MB storage space in one account	\$ 0.01	1	\$ 0.01	

Total 2 item(s) in Cart
Total Price **\$ 0.05**
CHECKOUT

Click CHECKOUT to generate an order.

Confirm Order

### Order Detail

DX-Service-T1GB-WW ( SN : DX21000216140002 )	\$ 0.01	×4
DX-Service-S1MB-WW	\$ 0.01	×1
		Total Price <b>\$ 0.05</b>

### Invoice

No need for Invoice     Electric Invoice

Invoice Title(The name of your company) \*

---

Email \*

---


BACK TO CART
CONFIRM ORDER

Click CONFIRM ORDER to pay this order.

5

**Payment Method**

Total to pay now **\$ 0.05**



[PAY NOW](#)


### 5.2.3 Devices

It will switch to page of device list after clicking “Devices” in navigation bar.

Secure Tunnels							
	<input type="text" value="Search"/>		All				
#	Device Name ↑	SN	Device Type	Storage Usage	Data Usage	Created	Operation
1	DX2100_3EDC	DX21000216140002	DX2100	13.78 MB	4.63 MB	2016-05-06 09:17	...
2	DX2100_956D	DXR02010E200004	DX2100	0.00 MB	0.00 MB	2016-03-25 13:45	...
3	DX2300_7FE0	DXL02040F110011	DX2300	0.00 MB	0.00 MB	2016-03-22 11:32	...
Total 3 Device(s)							

Item	Description
<input type="text" value="Search"/>	You can filter the device base on you input the key word of the device name.
<input type="text" value="All"/>	Filter base on tunnel group, show all devices or only show the devices under user specified tunnel group.
Devices List	Show the list of device。 The information include device’s name, device’s SN, device’s type, storage usage, data usage, the time of binding device. <ul style="list-style-type: none"> <li>● Green represents that the device is on-line</li> <li>● Gray represents the device is off-line.</li> </ul>
	<ul style="list-style-type: none"> <li>●  : Represents that all device is displayed currently, and you can switch to on-line device list after clicking this icon.</li> <li>●  : Represents that on-line device is displayed currently, and you can switch to list of on-line device after clicking this icon.</li> </ul>
	Show relevant position information of device.
	Refresh pages
...	Show detail information of the device


- 📍: It will show relevant position information of device after you click “📍”, which is shown as follows:

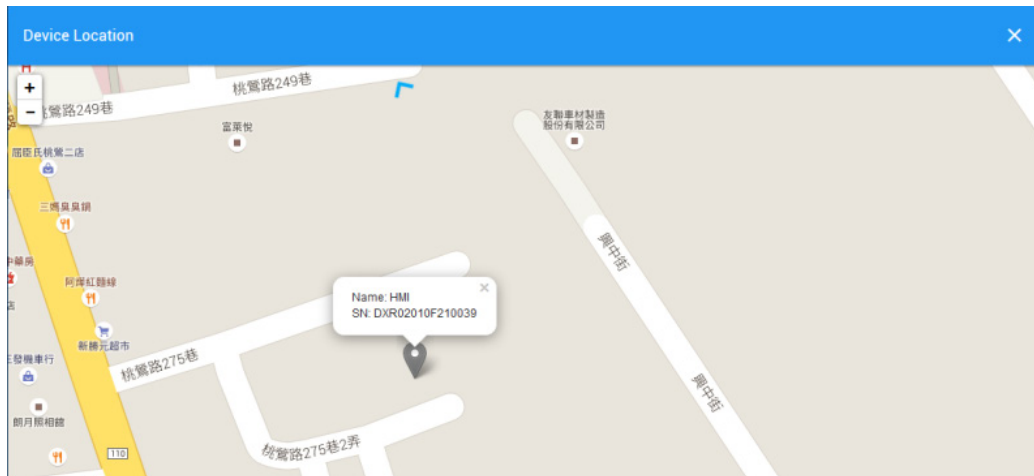






It will show the device name and SN of the device after clicking position icon in the map. When there is large number of device of user, it will switch to corresponding device when user clicks blue arrows at the edge of the map.

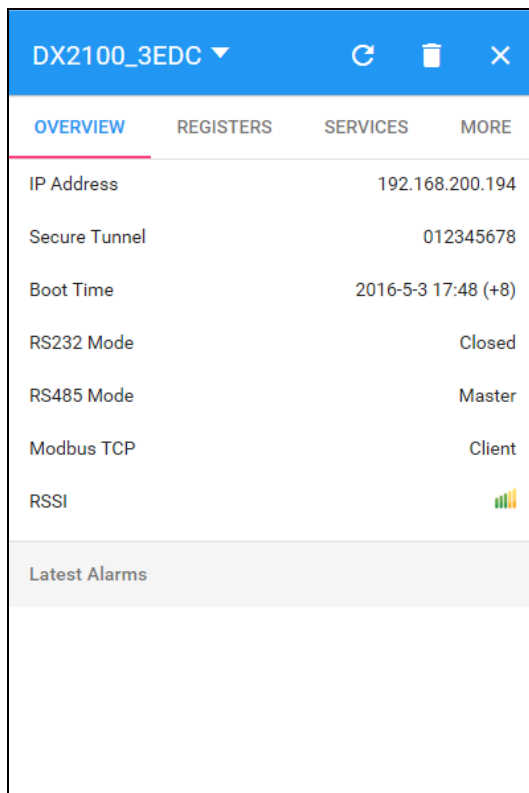- ⋮ : More detail information about device will be shown after clicking ⋮ under the “Operation” at the most right side of device list:

1. **OVERVIEW:** The page will show the basic information of the device and latest alarm message.



Item	Description
Operation zone of device	<p>It represents that device is on-line if background color is blue, and device is off-line if it is gray.</p> <ul style="list-style-type: none"> <li>•  : Show device names; it can switch device after clicking the drop down arrow.</li> <li>•  : Realize refresh of device data on operation page.</li> <li>•  : Delete binding relationship between device and the account. Device needs to be un-bund after clicking this button, and user can recover the device by rebinding.</li> <li>•  : Close the operation page.</li> </ul>
Page switching	<p>Operation is divided into 4 pages:</p> <ul style="list-style-type: none"> <li>• <b>Overview</b></li> <li>• <b>Registers</b></li> <li>• <b>Package</b></li> <li>• <b>More</b></li> </ul> <p>Different buttons are used to switch different pagers.</p>
Basic information zone	<p>Basic information is shown in Overview page.</p> <ul style="list-style-type: none"> <li>• <b>IP Address:</b> it means the IP that has been bound for device;</li> <li>• <b>Tunnel Network:</b> it means virtual network that has been bound to device;</li> <li>• <b>Boot Time:</b> it means the boot time of device;</li> <li>• <b>RS232 Mode:</b> work modes of RS232, including transparent transmission mode and slave station mode;</li> <li>• <b>RS485 Mode:</b> work modes of RS 485, including transparent transmission mode, slave station mode and master station mode;</li> <li>• <b>Modbus TCP:</b> work modes of Modbus TCP, including Modbus TCP Server, Modbus TCP Client and Closed</li> <li>• <b>RSSI:</b> it means signal strength of device which contains 5 bars; the larger the number of green bars is, the stronger the signal strength is;</li> </ul>
Latest Alarms	<p>The latest five Alarm of the current device. “” represents the state that the email is being sent;</p> <ul style="list-style-type: none"> <li>• <b>Green</b> represents that the email has been sent successfully</li> <li>• <b>Red</b> represents failure of sending.</li> </ul>

2. **REGISTER:** The page will show and manage register value that uploaded from DX production.


Register ID	Value	Timestamp	Actions
\$2048	20807	2016-05-06 10:40	⋮
\$2049	20807	2016-05-06 10:40	⋮
\$2050	20807	2016-05-06 10:40	⋮
\$2051	0	2016-05-06 09:18	⋮
\$2052	0	2016-05-06 09:18	⋮
\$2053	20807	2016-05-06 10:40	⋮
\$2054	0	2016-05-06 09:18	⋮
\$2055	20807	2016-05-06 10:40	⋮
\$2056	0	2016-05-06 09:18	⋮
\$2057	0		⋮

The History and Config options will be shown after clicking ⋮


Register ID	Value	Timestamp	Actions
\$2048	20807	2016-05-06 10:40	⋮ History Delete Config
\$2049	20807	2016-05-06 10:40	⋮
\$2050	20807	2016-05-06 10:40	⋮
\$2051	0	2016-05-06 09:18	⋮
\$2052	0	2016-05-06 09:18	⋮
\$2053	20807	2016-05-06 10:40	⋮
\$2054	0	2016-05-06 09:18	⋮
\$2055	20807	2016-05-06 10:40	⋮
\$2056	0	2016-05-06 09:18	⋮
\$2057	0		⋮

Item	Description
History	It represents trend chart of historical data
Delete	User can delete the all data of this register
Config	User can customize name of register and content returned.

**History :** The following figure will be shown after clicking “History”:

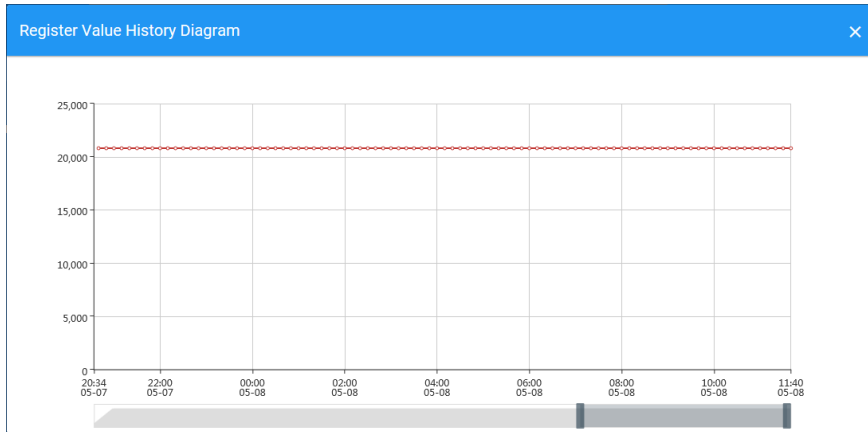

5

Item	Description
Register Value History Diagram	The latest trend chart of value of register;
Time Axis	User can change time scope of historical data by sliding “  ”.

**Config :** The following information will be shown after clicking “Config”

Register Configuration
✕

Register Address

2050

---

Alias Name \*

---

function(val) {

JavaScript Template

return val;

---

}

<

>

SAVE

Item	Description
Alias Name	The user can set the name of the register to be displayed in the "Alias Name"
function(val)	function(val) is used for convert the register value, and the grammar of function-supported JavaScript is similar.

There are two examples for "function (val)".

- **Example 1** : If you want to show the wind speed as 10m/s. (Data +unit, such as: speed 10m/s).

1. Input the code: **return val+"m/s"** in function (val){...} as the following picture.

The screenshot shows a 'Register Configuration' dialog box with a blue header and a close button (X). It contains the following fields:

- Register Address: 2050
- Alias Name: wind speed
- function(val) { JavaScript Template: `return val+"m/s";`

A 'SAVE' button is located at the bottom right of the dialog.

2. Save the configuration.

- **Example 2** : If you want to convert the register value to the text such as the register value of 1 shows the text as 'NO'; register value of 2 shows the text as 'OFF'

1. Input the code in function (val) {...} as the following picture.

The screenshot shows a 'Register Configuration' dialog box with a blue header and a close button (X). It contains the following fields:


- Register Address: 2050
- Alias Name: Y0
- function(val) { JavaScript Template: `if(val==1) return "ON"`  
`if(val==2) return "OFF"`



A red box highlights the JavaScript code. A 'SAVE' button is located at the bottom right of the dialog.

2. Save the configuration.

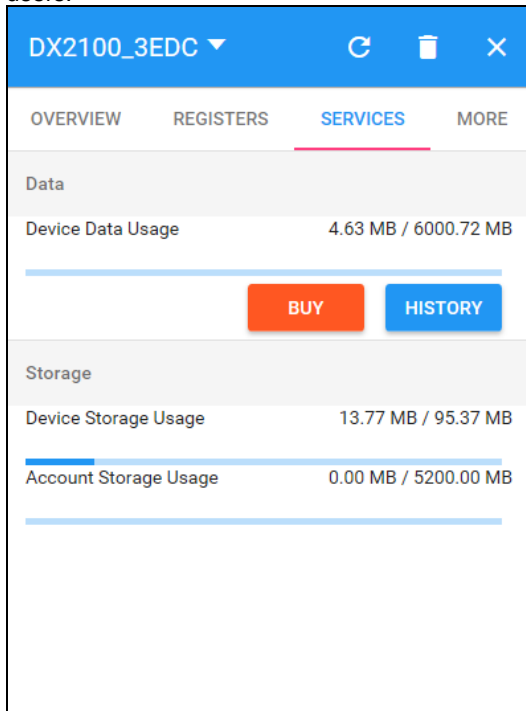


3. **SERVICES:** This page shows the Device Data Usage, Device Storage Usage and Account Storage Usage for users.




Item	Description
Data	<ul style="list-style-type: none"> <li>● <b>Device Data Usage:</b> Show device traffic usage this month and monthly capacity.</li> <li>● : User can purchase more traffic package for this device if need.</li> <li>● : Show the Data Usage History in past 12 months.</li> </ul>
Storage	<ul style="list-style-type: none"> <li>● <b>Device Storage Usage:</b> Show device storage usage till now and total capacity</li> <li>● <b>Account Storage Usage:</b> Show account and device storage usage till now and total capacity. account storage will share to all device under this account, device storage only use for itself.</li> </ul>


1. After Click the **BUY**, it will show the traffic package select page. User can add a package to cart or pay it direct.

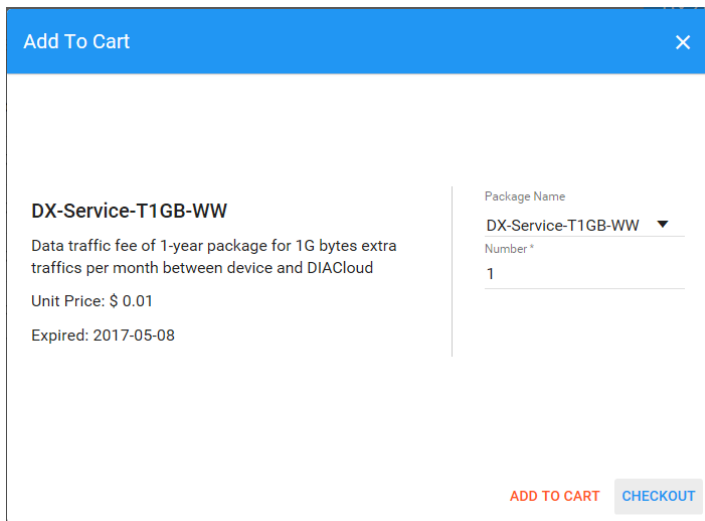

2. After Click the **HISTORY**, it will show the Data Usage History in past 12 months.

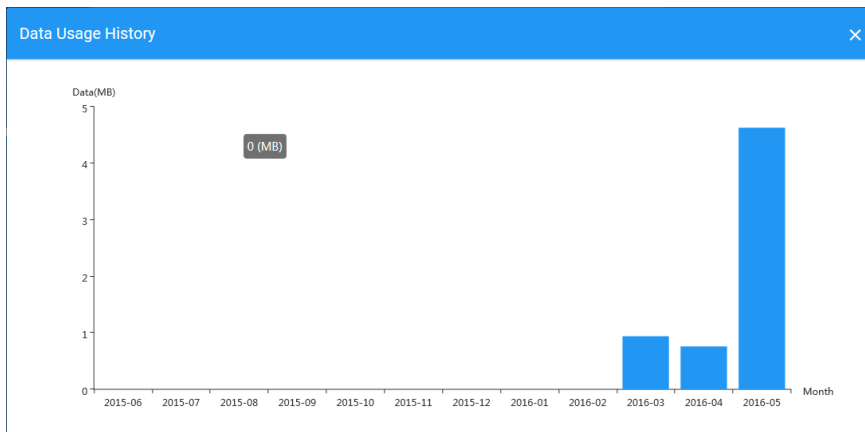

**Notice**


 Traffic package is tie to device and computed separately for each device, user can purchase more for each device  
 Initial storage package is tie to device, after the device's storage is spent all, it wil charge to account storage. User can purchase more for account only, this means the account storage will share to all devices under this account.

4. **MORE:** This page will show the Serial Number, Software Version, Hardware Version, and IMEI for users.



### 5.2.5 Secure Tunnels

Secure Tunnel is an important concept in DIACloud. Its objective is to realize virtual Switch across Internet; when device is bound to this network, it will be equivalent to adding device with one LAN port; when PC operates DIACom and creates a virtual network, PC and the device will be under the same switch at this time. It is shown as follows:

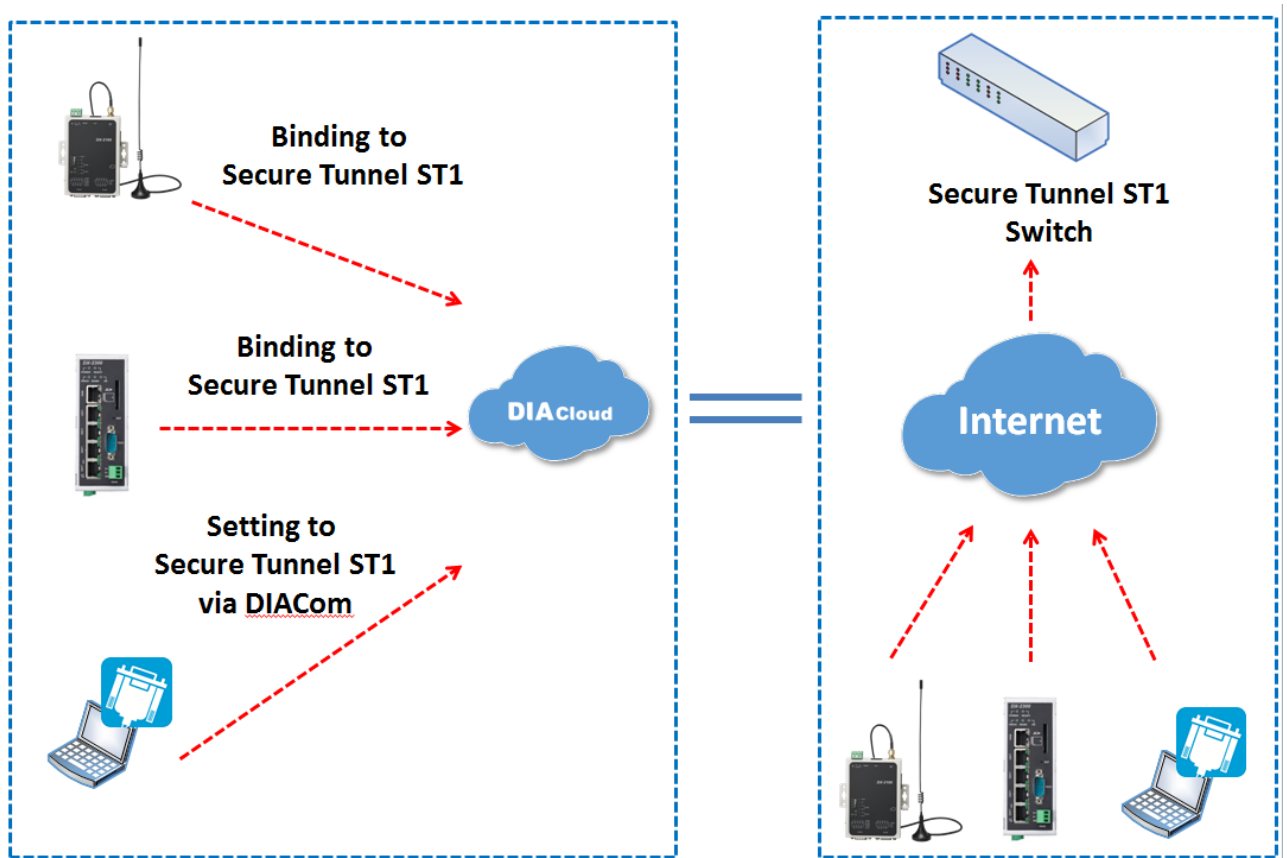

Users can manager the tunnel network in this page. Interface is shown as follows:

#	Network Name ↑	DHCP	DHCP IP Range	Status	Operation
1	DeltaNetwork	Enable	192.168.200.100 192.168.200.200	Normal	...
2	HM2016	Enable	192.168.199.100 192.168.199.200	Normal	...

Total 2 tunnel network(s)

tem	Description
🔍 Search	Search the existed tunnel network
Tunnel network List	List all tunnel network under this account
+	Add a new tunnel network
🔄	Refresh the tunnel network list

...	Edit the tunnel network
-----	-------------------------

☁
🗑
✕

Network Name  
DeltaNetwork

---

DHCP

DHCP IP Start  
192.168.200.100

---





DHCP IP End  
192.168.200.200

---

DHCP IP Mask  
255.255.255.0

---

SAVE

Item	Description
Tunnel Network Information	The detail information of tunnel network: <ul style="list-style-type: none"> <li><b>Network Name:</b> User can enter a name of tunnel network.</li> <li><b>DHCP Option:</b> Automatic IP Address Assignment by DIACloud.</li> <li><b>DHCP IP Start:</b> it represents the beginning IP in automatic IP distribution address pool of DIACloud</li> <li><b>DHCP IP End:</b> it represents the ending IP in automatic IP distribution address pool of DIACloud.</li> </ul>
	If the DHCP of this tunnel network is enabled, click  will export configurations include DIACloud Servier /account /Tunnel networks info to a file (default file name Provision_vlnname_date_time.bin). Note: Detail configuration, please refer to <b>3.2 SD Card Quick Installation</b> .
	Delete the current tunnel network
	Close the current operation window.
<span style="background-color: #ff69b4; padding: 5px 15px; border-radius: 5px;">SAVE</span>	Save the configuration of tunnel network

### 5.2.6 Sub Users

All accounts that are registered through register page of DIACloud (<http://www.DIACloudSolutions.com/#/signup>) are main accounts. Every main account can create sub-account, and users can realize power separation and grouping management of device by conducting authorization for virtual network and DIACom by sub-account. Use can conduct addition and operation for sub-account through the “Sub Users” page.

#	Account ↑	Login to EthDirect	Status	Created	Operation
1	3208467055@qq.com	Disabled	Activated	2016-02-24 20:02:29	...
2	444386414@qq.com	Enabled	Activated	2015-10-27 22:04:34	...
3	shinewaker@sina.cn	Enabled	Activated	2016-02-25 17:06:26	...
4	test_lot@126.com	Enabled	Activated	2016-02-29 17:35:54	...

Total 4 user(s)

Item	Description
Search	Search the sub users.
Sub Users List	Show the list of all sub users in main account.
+	Add a sub user.
	Refresh the list of sub users.
...	Modify the access control of the tunnel network.

- ... : User can modify the access control of the tunnel network.

Account \*
✖

444386414@qq.com

---

Login to EthDirect



Tunnel Networks

test02


test

SAVE

Item	Description
Sub Users Information	<ul style="list-style-type: none"> <li>● <b>Login to DIACom:</b> Allow the sub user to access the DIACom if the option is enabled.</li> <li>● <b>Tunnel Network:</b> Allow the sub user to access the Tunnel Network if the option of Tunnel Network is checked.</li> </ul>

	Delete a sub user.
	Close the current operation window.

- **+** : User can add sub users after clicking the “+” in the page, and. The following interface will be shown after clicking the “+” in the page:

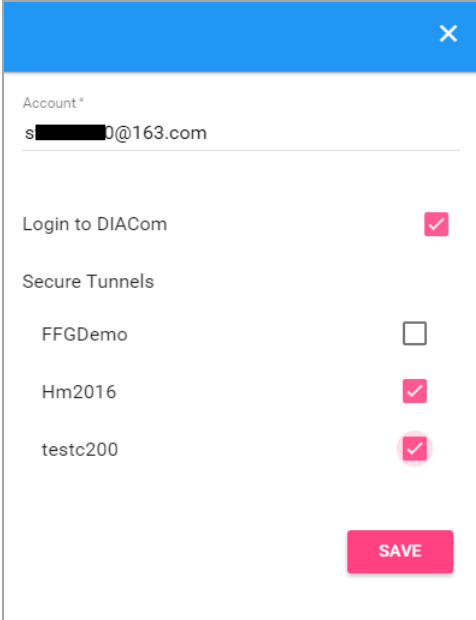

5

1. Fill in corresponding account information and conduct authorization for it.
2. The system will send an activation email which is attached with random login password to email box of sub user. The account status is “Un-activated” now.
3. Goto the mailbox, click the hyperlink to complete account activation operation, then sub user can login DIACloud with new account.
4. The page will link to the following page after clicking the activation link in the email:

Activate your account on DIACloud Inbox x**DIACloud** <no-reply@diacLOUDSOLUTIONS.COM>

3:40 PM (0 minutes ago) ☆



to me ▾

Dear User,

Please complete your registration by following the link below:

<http://www.diacLOUDSOLUTIONS.COM/#/activate?n=ww7843673%40gmail.com&t=l8SmPDnpyl24XV6llncjZJ5hbGSSUAE>

Please activate your account within 48 hours, otherwise you need to re-create your account.

If you did not register recently, or believe you have received this email in error. Please disregard this message.

请点击下面的链接完成注册：

<http://www.diacLOUDSOLUTIONS.COM/#/activate?n=ww7843673%40gmail.com&t=l8SmPDnpyl24XV6llncjZJ5hbGSSUAE>

请在48小时内激活您的账号，否则您需要重新注册。

如果该账号不是您本人注册的，请忽略本邮件。

Thanks!

The DIACLOUD Team

- When user login to DIACLOUD with main account and the sub user that we created has been activated.

## 5.2.7 Logs

This page will show the web operation information of some users. It includes: login IP, setup of register, API interface call of DIACLOUD and other information.



#	User Name	Log Content	Created
1	13616061750@163.com	push reg , cmd = 21300,1,2049,556	2016-04-01 11:12:41
2	13616061750@163.com	Login from 211.97.130.218	2016-04-01 11:11:36
3	13616061750@163.com	Login from 218.66.157.46	2016-04-01 10:45:41
4	13616061750@163.com	Login from 211.97.130.218	2016-04-01 10:43:23
5	13616061750@163.com	Edit tunnel network, id= 1247, name = test02, dhcp = 1	2016-04-01 10:38:20
6	13616061750@163.com	Logout	2016-04-01 10:37:55
7	13616061750@163.com	Login from 218.66.157.46	2016-04-01 10:37:54
8	13616061750@163.com	Login failed. username=13616061750@163.com from ip=218.66.157.46	2016-04-01 10:37:48
9	13616061750@163.com	Login failed. username=13616061750@163.com from ip=218.66.157.46	2016-04-01 10:37:41
10	13616061750@163.com	Login failed. username=13616061750@163.com from ip=218.66.157.46	2016-04-01 10:37:35

10 ▾

1 - 10 / 1134

⏪ &lt; &gt; ⏩



### 5.2.8 Orders

In this page, user can check his all orders. Continue to pay for the unpaid orders or cancel the unpaid orders.

#	Order NO.	Amount	Created	Status	Operation
1	120160506042313747581	\$ 100	2016-05-06 16:23:13	Wait for Payment <a href="#">Order Detail</a>	<b>PAY</b> <a href="#">Cancel</a>
2	120160506042243779488	\$ 99.99	2016-05-06 16:22:43	Wait for Payment <a href="#">Order Detail</a>	<b>PAY</b> <a href="#">Cancel</a>
3	120160506110245733298	\$ 99.99	2016-05-06 11:02:45	Wait for Payment <a href="#">Order Detail</a>	<b>PAY</b> <a href="#">Cancel</a>
4	120160505060220111921	\$ 0.01	2016-05-05 18:02:20	Finished <a href="#">Order Detail</a>	
5	120160505052319041416	\$ 0.01	2016-05-05 17:23:19	Finished <a href="#">Order Detail</a>	
6	120160505052149784903	\$ 0.01	2016-05-05 17:21:49	Finished <a href="#">Order Detail</a>	
7	120160505052038875275	\$ 0.01	2016-05-05 17:20:39	Finished <a href="#">Order Detail</a>	
8	120160505051413353285	\$ 0.01	2016-05-05 17:14:13	Finished <a href="#">Order Detail</a>	
9	120160505051019658664	\$ 0.01	2016-05-05 17:10:20	Wait for Payment <a href="#">Order Detail</a>	<b>PAY</b> <a href="#">Cancel</a>
10	120160505050752270363	\$ 0.01	2016-05-05 17:07:52	Wait for Payment <a href="#">Order Detail</a>	<b>PAY</b> <a href="#">Cancel</a>

10 ▾ 1 - 10 / 51 < > >>

Item	Description
<a href="#">Order Detail</a>	View the order detail information
<b>PAY</b>	Pay for the unpaid order
<a href="#">Cancel</a>	Cancel the order, order will remove from the list.


● Order detail

Order Detail			
#	Package Name	Unit Price	Number
1	DX-Service-S1MB-WW Cloud Storage fee of 5-years package for 200MB storage space in one account	\$ 0.01	x1
			Total Price <b>\$ 0.01</b>

● Pay: Currently, we only support payments through PayPal for Non-Chinese user.

Payment Method

Total to pay now **\$ 99.99**



**PAY NOW**

### 5.2.9 Profile

In this page, QR Code of user, Package info, password management and other information will be shown.

Item	Description
QR Code	You can get the part information of user by using DIACloud APP and scanning QR Code.
Account	The current account information.
Package info	<ul style="list-style-type: none"> <li>Show account storage usage till now</li> <li><a href="#">BUY</a> user can purchase more storage package for this account if need</li> </ul> Notice: account storage will share to all device under this account.
Change Password	Change the password of DIACloud user account. Note: parts of old users use password in 6 digits; the new password has been increased to 8 digits to improve safety of their accounts.

After Click the [BUY](#), it will show the storage package select page.

**Add To Cart** ✕

---

**DX-Service-S1MB-WW**

Cloud Storage fee of 5-years package for 200MB storage space in one account

Unit Price: \$ 0.01

Expired: 2017-05-08

Package Name  
DX-Service-S1MB-WW ▼

Number \*  
1


**ADD TO CART** **CHECKOUT**

Change Password page as below

5

**Profile**

---



Account      asdfasdf22016@163.com

Country      United States

PACKAGE INFO    **CHANGE PASSWORD**

---

Current Password \*

New Password \*

Confirm Password \*

SAVE

---


## Chapter 6 DIACloud APP

### Table of Contents

<b>6.1</b>	<b>DIACloud APP Introduction .....</b>	<b>6-2</b>
6.1.1	Devices supported .....	6-2
6.1.2	DIACloud APP Installation .....	6-2
<b>6.2</b>	<b>DIACloud APP Function .....</b>	<b>6-3</b>
6.2.1	DIACloud APP Login .....	6-3
6.2.2	Device list .....	6-4
6.2.3	Device details .....	6-5
6.2.4	Registers View .....	6-6
6.2.5	Alarm list.....	6-7

## 6.1 Introduction to DIACloud APP

DIACloud APP is the client software of DIACloud cloud platform running on mobile devices. The APP supports both iOS and Android mobile system, it enables users to view the field data collected, the locations of the field devices, and the alarms/notifications pushed by the industrial IOT cloud platform, so that keep users posted anytime and anywhere, and therefore improve the manageability of devices, optimize the device performance and efficiency, save the operation cost and enhance the service quality.

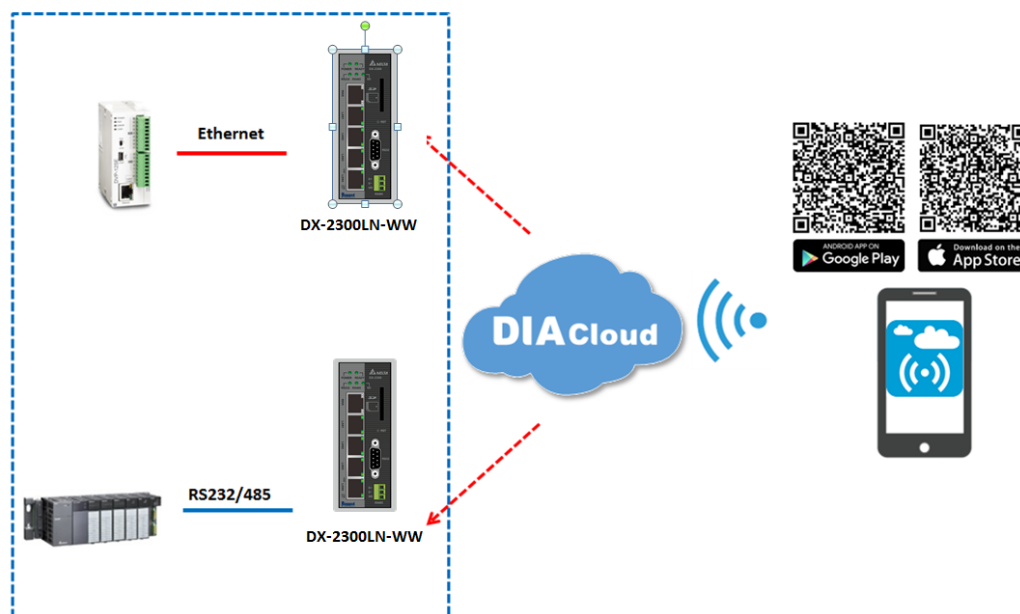

### 6.1.1 Devices Supported

The APP can support the devices below:

Device Model	Firmware Version
DX-2100	V1.3.0.1 or above
DX-2300	V1.0.0.1 or above

### 6.1.2 DIACloud APP Installation


The DIACloud APP is available on Google Play and Apple APP Store.

Mobile Device	OS Version
Android	4.4.0 or above
iPhone	6.2.0 or above






## 6.2 DIACloud APP Function
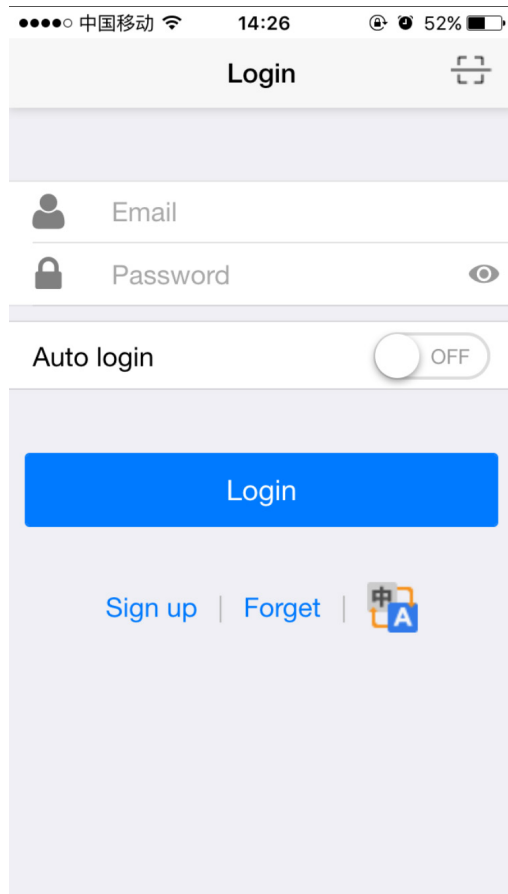
### 6.2.1 DIACloud APP Login

Enter the DIACloud account and password, then click the “Sign in” button to login the APP. Click the “Sign up” to register an account if you don’t have one.




6




Item	Description
	Scan QR code, the QR code is generated by DIACloud Web portal, which carries the user name and password information. By scanning the QR code, user won't need to input user name. By default, the APP will connect the default DIACloud server in the cloud, if the APP is to connect other servers, QR code should be scanned to provision the APP.
	DIACloud account, Email format
	The password of DIACloud account, click  to see what are you input
Auto Login	Save the password and login the APP automatically
Login	Login to App
Sign up	Create a new DIACloud account
Forget	Reset the password if you forget it.
	Switch the language.

## 6.2.2 Device List

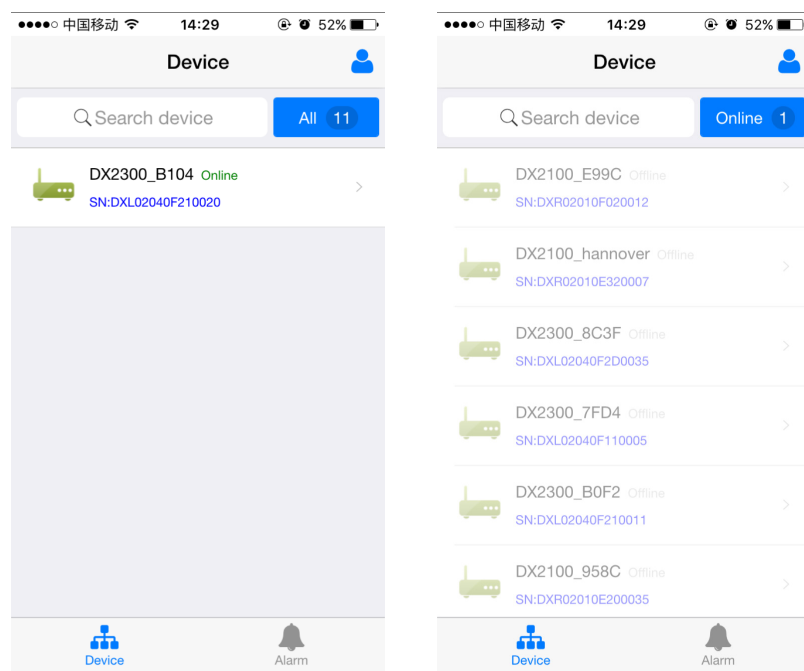Device list will be shown after user login the APP.




Device tab and alarm tab will be shown in the APP. In the device tab, the device information will be shown, include the value of registers of the remote device. And the value of the register can be changed in the APP as well. In the alarm tab, users can read the alarm messages.

Item	Description
	Logoff or exit App
Search	Search device base on key word
All/Online	<ul style="list-style-type: none"> <li>Click "ALL" to show all device</li> <li>Click "Online" only show online device. Digit at the back is the all/online device count.</li> </ul>
Device list	Display device online/offline status, device name, device serial number. Click it will go into device detail page
	Switch to device list page
	Switch to alarm list page.

### 6.2.3 Device Details

Device details will be shown by selecting a device in the device list.

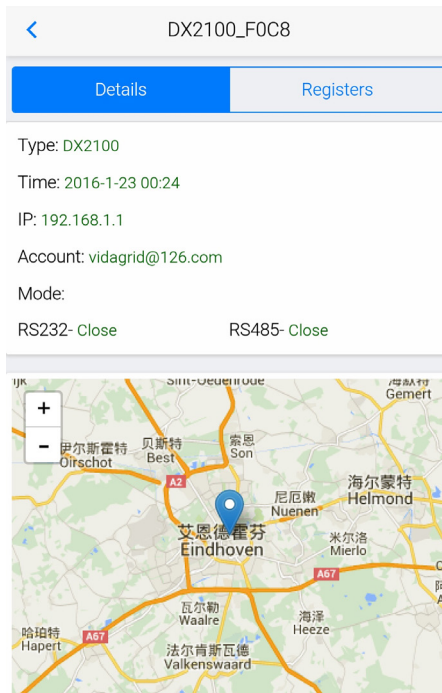

Item	Description
Type	Type of the device
Time	The time when the device is online.
IP	IP Address of the device
Account	DIACloud account activating the device.
Mode	The working mode of RS485 and RS232. <ul style="list-style-type: none"> <li>● <b>RS232:</b> Transparent transmission mode or Slave mode</li> <li>● <b>RS485:</b> Transparent transmission mode / Slave mode / Master mode</li> </ul>
Map	Showing the location of the device on the map











## 6.2.4 Registers View

By selecting the “Registers” table, the name, value and last change time of the register will be shown. The information can be refreshed by pulling down the APP. When there are a lot of registers, more registers can be shown by pulling up the App.

-82 中国移动 14:48 56%

< DX2100\_075C

Details Registers

Addr.	Value
Unit Status	Unit Start-up 
Temperature	4.4°C 
Active Power	0kW 
Rotating Speed	0rpm 
Wind Speed	0m/s 
Wind Direction	0° 
Power Generation	0kWh 
Use Ratio	0 

Click icon  to edit the register value.

-82 中国移动 14:48 56%

< Edit

Addr: Unit Status


Value: Unit Start-up


Time: 2016-03-22 14:33:42.130148

Cancel OK

Click “ok” button, the register value will be pushed to the device.

## 6.2.5 Alarm List

Alarm criteria can be set on the device configuration web page. When the alarm criteria are met, the device will send out alarm messages. User can click the “Alarm” tab to read the alarm messages. When there are new alarm messages, the number of the unread messages will be shown on the icon .

- Alarm tab will be shown by clicking icon , the alarm messages in Red are unread messages. Digit in parentheses is the number of alarm messages.
- Pull down the APP to refresh the alarm list.

